

# Deploy the ExtraHop Discover Appliance 1100

Published: 2018-04-20

The following procedures explain how to deploy an ExtraHop Discover Appliance 1100.

## System requirements

Your environment must meet the following requirements to deploy the EDA 1100:

- **Power supply:** 100-240v power source
- **Network access:** Two 10/100/1000 BASE-T network ports. One configured as the management port and the other configured as the monitoring port.

## Front panel controls



### Power button

Press the power button once to power the appliance on or off.

### LED indicators

There are four LEDs on the front panel. The top (first) LED indicates the status of network port 1 and the second LED indicates the status of network port 2. The remaining two LEDs are reserved for future use. The LED changes color to indicate the port status, as follows:

#### Off

The appliance is turned off

#### Amber

The system is starting up

#### Red

No network link is available

#### Green

A network link is established

### LCD

Through the LCD, you can view the current settings, manually configure the network settings, run the ping network utility, and restart or shutdown the appliance.



**Note:** The LCD automatically dims after 60 minutes if no user input is received. Press any of the input buttons to illuminate the display again.

### Input buttons

- Press the up, down, left, and right arrow buttons to navigate through the LCD menu.


- Press the green checkmark button to select a configuration setting and to save your changes.
- Press the red X button to cancel changes before saving and return to the home screen.

## LCD menu layout

The table below represents the layout of the LCD menu controls.

Home Screen	Main Menu
<ul style="list-style-type: none"> <li>• Host name</li> <li>• IP address</li> <li>• Firmware</li> </ul>	<ul style="list-style-type: none"> <li>• Appliance info               <ul style="list-style-type: none"> <li>• System serial</li> <li>• Product key</li> </ul> </li> </ul>
	<ul style="list-style-type: none"> <li>• Network menu               <ul style="list-style-type: none"> <li>• View net info                   <ul style="list-style-type: none"> <li>• DHCP</li> <li>• IP</li> <li>• Net</li> <li>• GW</li> <li>• DNS</li> <li>• Mgmt MAC address</li> </ul> </li> <li>• Enable DHCP (Visible only if a static IP is set)</li> <li>• Set static IP</li> <li>• Set DNS servers (Visible only if a static IP is set)</li> <li>• Ping</li> </ul> </li> </ul>
	<ul style="list-style-type: none"> <li>• System               <ul style="list-style-type: none"> <li>• Restart</li> <li>• Shut down system</li> </ul> </li> </ul>

## Rear panel ports

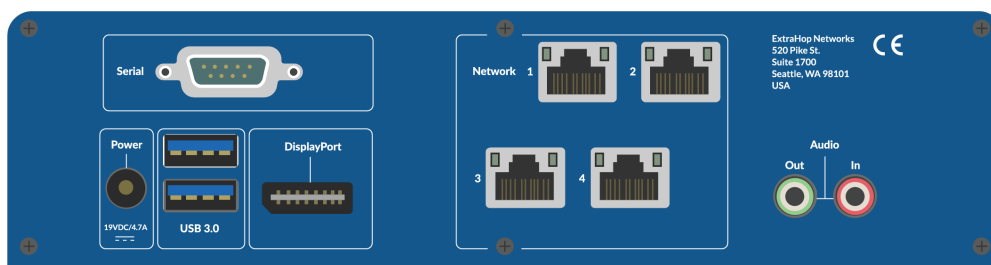

- One RS-232 serial port to connect a console device.
- One power port to connect the EDA 1100 to an AC power source.
- Two USB 3.0 ports to connect a keyboard.
- One DisplayPort to connect an external display.
- Four 10/100/1000 BASE-T network ports. Port 1 is the primary management port and port 2 is the primary monitor port.

 **Note:** Ports 3 and 4 are reserved for future use and are disabled.

## Set up the appliance

1. Attach the four self-adhesive bumpers included in the package to the bottom of the appliance.
2. Place the appliance on a flat surface near a suitable power source. To prevent overheating, leave at least 2 inches (5 cm) of clearance around the sides and top of the appliance. Optionally, you can mount the appliance to a wall.
3. Connect an Ethernet cable from network port 1 on the back of the appliance to your management network.
4. Connect an Ethernet cable from network port 2 on the back of the appliance to the mirror port on your switch.
5. Connect the power cord to the power port on the back of the EDA 1100, and then plug the cord into a power outlet. The appliance powers on automatically.

## Configure the management IP address

DHCP is enabled by default on the EDA 1100. When you power on the appliance, interface 1 attempts to acquire an IP address through DHCP. The IP address appears on the home screen of the LCD.

If your network does not support DHCP, you can configure a static IP address through the LCD menu on the front panel or through the command-line interface (CLI). If an IP address has not been configured, the home screen displays `IP: (None)`.

Complete the following steps to manually configure an IP address from the front panel.

1. Press the checkmark button on the front of the EDA 1100.
2. Press the down arrow button to select `Network` menu, and then press the checkmark button.
3. Press the down arrow to select `Set static IP`, and then press the checkmark button.
4. Press the left or right arrows to select the first digit to change, and then press the up or down arrows to change the digit to the desired number. Repeat this step for each digit you need to change. After you configure the desired IP address, press the checkmark button.
5. On the `Network mask` screen, press the left or right arrows to select the first digit to change, and then press the up or down arrows to change the digit to the desired number. Repeat this step for each digit you need to change. After you configure the desired network mask, press the checkmark button.
6. On the `Default gateway` screen, press the left or right arrows to select the first digit to change, and then press the up or down arrows to change the digit to the desired number. Repeat this step for each digit you need to change. After you configure the desired default gateway, press the checkmark button.
7. Confirm your modified network settings on the `Settings saved` screen, and then press any button to return to the `Network Menu`.
8. Press the down arrow and scroll to `Set DNS servers`, and then press the checkmark button.
9. Press the left or right arrows on the `DNS1` screen to select the first digit to change, and then press the up or down arrows to change the digit to the desired number. Repeat this step for each digit you need to change, and then press the checkmark button to continue to the `DNS2` screen.
10. Optional: Repeat step 9 to configure a second DNS server.
11. Confirm the DNS settings on the `Settings saved` screen, confirm the DNS settings, and then press any button to return to the `Network Menu`.

## (Optional) Configure a static IP address through the CLI

You can access the CLI by connecting a USB keyboard and SVGA monitor to the appliance or through an RS-232 serial cable and a terminal-emulator program. The terminal emulator must be set to 115200 bps with 8 data bits, no parity, 1 stop bit (8N1), and hardware flow control should be disabled.

1. Log in to the console with the `shell` user account. At the password prompt, type the serial number, which is located on the bottom of the appliance and displayed in the `Appliance info` section of the LCD menu.
2. Enable privileged commands by running the following command:

```
enable
```

3. At the password prompt, type the serial number, and then press ENTER.
4. Enter configuration mode by running the following command:

```
configure
```

5. Enter the interface configuration mode by running the following command:

```
interface
```

6. Run the `ip` command and specify the IP address and DNS settings in the following format: `ip ipaddr <ip_address> <netmask> <gateway> <dns_server>`  
For example:

```
ip ipaddr 10.10.2.14 255.255.0.0 10.10.1.253
10.10.1.254
```

7. Leave the interface configuration section:

```
exit
```

8. Save the running config file:

```
running_config save
```

9. Type `y` and then press ENTER.

## Configure the Discover appliance

After you configure an IP address for the Discover appliance, you can log into the Discover Admin UI through the following URL: `https://<discover_ip_address>/admin` and complete the following recommended procedures.


- [Register the ExtraHop appliance](#)
- [Configure the system time](#)
- [Configure email notifications](#)
- [Pair the Discover appliance to any Command or Explore appliances](#)

## Register the ExtraHop appliance

Complete the following steps to apply a product key supplied by ExtraHop Support.

If you do not have a product key, contact [support@extrahop.com](mailto:support@extrahop.com).

1. In your browser, type the IP address of the ExtraHop appliance (`https://<extrahop_ip_address>/admin`).
2. Review the license agreement, select **I Agree**, and then click **Submit**.

3. On the login screen, type `setup` for the username.
  4. For the password, select from the following options:
    - For a physical appliance, type the service tag number found on the pullout tab on the front of the appliance.
- 

**Note:** The serial number for the EDA 1100 is located on the bottom of the appliance, and displayed in the `Appliance info` section of the LCD menu.
- For a virtual appliance, type `default`.
  5. Click **Log In**.
  6. In the System Settings section, click **License**.
  7. Click **Manage License**.
  8. Click **Register**.
  9. Enter the product key and then click **Register**.
  10. Click **Done**.

## Configure the System Time


The default time server setting is `pool.ntp.org`. If you want to maintain the default setting, skip this procedure and go to the next section.

1. In the System Settings section, click **System Time**.
2. Click **Configure Time**.
3. Click the Time Zone drop-down list and select a time zone.
4. Click **Save and Continue**.
5. Type the IP address or FQDN for the time servers in the Time Server fields.
6. Click **Save**, and then click **Done**.

## Configure email settings

You must configure an email server and sender before the ExtraHop appliance can send notifications about system alerts by email.

1. In the Network Settings section, click **Notifications**.
2. Click **Email Server and Sender**.
3. On the Email Settings page, enter the following information:
  - **SMTP Server:** The IP address for the outgoing SMTP mail server.



**Note:** The SMTP server should be the FQDN or IP address of an outgoing mail server that is accessible from the ExtraHop management network. If the DNS server is set, then the SMTP server can be a FQDN, otherwise it needs to be an IP address.

- **Sender Address:** The email address for the notification sender.
  - **Report Sender Address:** The email address for the report sender.
4. Click **Save**.

### Add an email notification group

Email notification groups are assigned to alerts to designate who should receive an email when that alert becomes active. Although you can specify individual email addresses to receive emails for alerts, email groups are the most effective way to manage your alert recipient list.

1. In the Network Settings section, click **Notifications**.
2. Click **Email Notification Groups**.
3. Click **Add Group**.
4. In the Group Info section, enter the following information:

- **Name:** The name of the email group.
  - **System Health Notifications:** Select this checkbox if you want to send system storage alerts to the email group. These alerts are sent under the following conditions:
    - A virtual disk is in a degraded state.
    - A physical disk is in a degraded state.
    - A physical disk has an increasing error count.
    - A necessary role is missing, such a firmware, datastore, or packet capture.
5. In the Email Addresses text box, type the recipient email addresses for the team members that you want to receive the alert emails for this group. Email addresses can be entered one per line or separated by a comma, semicolon, or space. Email addresses are checked only for [name]@[company].[domain] format validation. There must be at least one email address in this text box for the group to be valid.
  6. Click **Save**.

## Pair the Discover appliance to any Command or Explore appliances

If you have any ExtraHop Command or Explore appliances in your environment, you can join the Discover appliance to the Command cluster or pair the Discover to an Explore appliance. For more information, see the [ExtraHop Admin UI Guide](#).