

Deploy the ExtraHop Command Appliance with Hyper-V

Published: 2018-07-07

The following procedures explain how to deploy an ExtraHop Command appliance on the Microsoft Hyper-V platform. You must have experience administering your hypervisor product to complete these procedures.

If you need either the installation package files or a license key for the virtual appliance, contact support@extrahop.com.

Virtual machine requirements

You must have an existing installation of Hyper-V on Windows Server 2012 (or later) capable of hosting the Command virtual appliance. In addition, you need Hyper-V Manager to manage the virtual machine.

The following server hardware is required for the Command virtual Appliance

CPU

2 CPUs with hyper-threading support, VT-x technology, and 64-bit architecture.

RAM

4 GB RAM or higher

Disk

44 GB or higher disk (thick-provisioned)

• Important: If you want to deploy more than one ExtraHop virtual appliance, create the new instance with the original deployment package or clone an existing instance that has never been started.

Performance guidelines

The following table provides guidelines that can help you optimize the performance of the Command appliance. These guidelines are minimum requirements that you might need to adjust based on the size and needs of your environment.

Connected ExtraHop Appliances	1-4	5-16	17-64	65 or more
CPU Cores	2	4	8	16
RAM	4 GB	8 GB	16 GB	24 GB
Boot Disk	4 GB	4 GB	4 GB	4 GB
Datastore Disk	40 GB	48 GB	64 GB	80 GB
Disk Total	44 GB	52 GB	68 GB	84 GB
	ExtraHop Appliances CPU Cores RAM Boot Disk Datastore Disk	ExtraHop Appliances CPU Cores 2 RAM 4 GB Boot Disk 4 GB Datastore Disk 40 GB	ExtraHop Appliances CPU Cores 2 4 RAM 4 GB 8 GB Boot Disk 4 GB 4 GB Datastore Disk 40 GB 48 GB	ExtraHop Appliances CPU Cores 2 4 8 RAM 4 GB 8 GB 16 GB Boot Disk 4 GB 4 GB 4 GB Datastore Disk 40 GB 48 GB 64 GB

Install the files for Hyper-V

Before you begin

If you have not already done so, download the ExtraHop Command virtual appliance file for Hyper-V from the ExtraHop Customer Portal 2 and extract the contents from the .zip file to your Windows Server machine.



- Go to the Start menu and open the Hyper-V Manager.
- In the right pane of the Hyper-V Manager, click **New** and select **Import Virtual Machine...**.
- If the Before You Begin screen appears, click Next. Otherwise, continue to the next step.
- Browse to the folder with the extracted files and click Next.
- Select the virtual machine to import and click Next.
- Select Copy the virtual machine and click Next.
- 7. On Choose Folders for Virtual Machine Files, select the location to store the configuration of the VM and click Next.
- 8. On Choose Storage Folders to Store Virtual Hard Disks, select a location to store the virtual hard disks and click Next.
- 9. On the summary screen review your choices and then click **Finish**.
- 10. Wait several minutes for the files to copy.
- 11. In the Virtual Machines list, right-click the virtual machine and select Start.
- 12. Right-click the virtual machine again and select **Connect**.
- 13. Click the green start button at the top of the screen and wait for the login prompt.



- 14. At the login prompt, type shell and then press ENTER.
- 15. At the password prompt, type default, and then press ENTER.
- 16. Run the show ipaddr command to display the IP address of the Discover appliance. You need the IP address to apply the ExtraHop license in the next procedure.
 - Note: If your network does not support DHCP, see Configure a Static IP Address to set a static IP address.

Configure a static IP address through the CLI

The ExtraHop appliance is delivered with DHCP enabled. If your network does not support DHCP, no IP address is acquired, and you must configure a static address manually.

- 1. Establish a console connection to the ExtraHop appliance.
- At the login prompt, type shell and then press ENTER.
- 3. At the password prompt, type default, and then press ENTER.
- 4. To configure the static IP address, run the following commands:
 - a) Enable privileged commands:

enable

- b) At the password prompt, type default, and then press ENTER.
- c) Enter configuration mode:

configure

d) Enter the interface configuration mode:

interface

e) Run the ip command and specify the IP address and DNS settings in the following format: ip ipaddr <ip_address> <netmask> <gateway> <dns_server> For example:

ip ipaddr 10.10.2.14 255.255.0.0 10.10.1.253 10.10.1.254



Leave the interface configuration section: f)

```
exit
```

Save the running config file:

```
running_config save
```

h) Type y and then press ENTER.

Register the ExtraHop appliance

Complete the following steps to apply a product key.

If you do not have a product key, contact your ExtraHop account team.



Tip: To verify that your environment can resolve DNS entries for the ExtraHop licensing server, open a terminal application on your Windows, Linux, or Mac OS client and run the following command:

```
nslookup -type=NS d.extrahop.com
```

If the name resolution is successful, output similar to the following appears:

```
Non-authoritative answer:
d.extrahop.com nameserver = ns0.use.d.extrahop.com.
d.extrahop.com nameserver = ns0.usw.d.extrahop.com.
```

- 1. In your browser, type the URL of the ExtraHop Admin UI, https://extrahop_ip_address>/ admin.
- Review the license agreement, select I Agree, and then click Submit.
- 3. On the login screen, type setup for the username.
- 4. For the password, select from the following options:
 - For 1U and 2U appliances, type the service tag number found on the pullout tab on the front of the appliance.
 - For the EDA 1100, type the serial number displayed in the Appliance info section of the LCD menu. The serial number is also printed on the bottom of the appliance.
 - For a virtual appliance, type default.
- Click Log In.
- 6. In the Appliance Settings section, click **License**.
- 7. Click Manage License.
- Click Register.
- 9. Enter the product key and then click **Register**.
- 10. Click Done.

Post-deployment actions

After you deploy the Command appliance, do the following:

- Admin UI Guide 2.
- UI Guide ₽.



Review the Discover and Command Post-deployment Checklist 2 and configure additional Command settings.