

# Download the running config as a text file

---

Published: 2019-02-10

You can download the running config file as a text file to your workstation. We recommend that you save a copy of this file in case of an unexpected system failure. The saved running config file can be uploaded to an ExtraHop appliance to restore system customizations and settings.

1. Log into the Admin UI on the ExtraHop appliance.
2. In the Appliance Settings section, click **Running Config**.
3. Click **Download config as a file**.

The current running configuration is downloaded as a text file to the default download location for your browser.