

# Configure a static IP address through the CLI

Published: 2020-02-24

By default, DHCP is enabled on your ExtraHop appliance. If your network does not support DHCP, an IP address cannot be acquired, and you must configure a static address manually.

## Before you begin

You must have the password for the **shell** and **setup** user accounts. See [Default User Accounts FAQ](#) for the default passwords for these user accounts.

1. Establish an SSH or console connection to the ExtraHop appliance.
2. At the login prompt, type **shell** and then press ENTER.
3. At the password prompt, type the **shell** user password.
4. To configure the static IP address, run the following commands:

- a) Enable privileged commands:

```
enable
```

- b) At the password prompt, type the **setup** user password, and then press ENTER.
- c) Enter configuration mode:

```
configure
```

- d) Enter the interface configuration mode:

```
interface
```

- e) Run the **ip** command and specify the IP address and DNS settings in the following format: **ip ipaddr <ip\_address> <netmask> <gateway> <dns\_server>**

For example:

```
ip ipaddr 10.10.2.14 255.255.0.0 10.10.1.253 10.10.1.254
```

- f) Leave the interface configuration section:

```
exit
```

- g) Save the running config file:

```
running_config save
```

- h) Type **y** and then press ENTER.

You can now access the ExtraHop web interface from any web browser through the assigned IP address.