

# Download the running configuration as a text file

---

Published: 2024-07-16

You can download the running configuration file to your workstation. You can open this text file and make changes to it locally, before copying those changes into the Running Config window.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Appliance Settings section, click **Running Config**.
3. Click **Download config as a file**.

The current running configuration file is downloaded as a text file to your default download location.