Deploy the ExtraHop EFC 1292v NetFlow Sensor

Published: 2025-04-01

This guide explains how to deploy the EFC 1292v NetFlow virtual sensor.

The EFC 1292v is designed to connect to RevealX 360 and RevealX Enterprise and collect NetFlow records from your network. Packet analysis is not available.

System requirements

Your environment must meet the following requirements to deploy an EFC 1292v virtual sensor on Linux KVM or VMware vSphere:

- You must have familiarity with administering Linux KVM or VMware VMware.
- You must have the ExtraHop deployment file, which is available on the ExtraHop Customer Portal.
- You must have an ExtraHop EFC 1292v sensor product key.
- You should upgrade to the latest patch for the Linux KVM or vSphere environment to avoid any known issues.

Virtual machine requirements

You must provision a hypervisor that most closely matches the following specifications for the virtual sensor.

Sensor	vCPUs	RAM	Disk
1100v	4	8 GB	46 GB

Deployment overview

Collecting NetFlow records requires the following configuration setup.

- Deploy an ExtraHop sensor instance in Linux KVM or VMware. For more information, see Deploy an ExtraHop sensor on Linux KVM a or Deploy the ExtraHop sensor on VMware a.
- Configure interfaces.
- Configure NetFlow settings on the ExtraHop system.

Configure interfaces

- 1. Log in to the Administration settings on the ExtraHop system through https://<extrahophostname-or-IP-address>/admin.
- 2. In the Network Settings section, click **Connectivity**.
- 3. In the Interfaces section, click the name of the interface you want to configure.
- 4. On the Network Settings for Interface *<interface number>* page, from the **Interface Mode** drop-down menu, select **Management + Flow Target**.
- 5. Disable all remaining interfaces, since the sensor cannot process NetFlow and wire data simultaneously:
 - a) In the Interfaces section, click the name of the interface you want to configure.
 - b) From the Interface Mode drop-down menu, select Disabled.

- c) Repeat until all additional interfaces are disabled.
- 6. Click Save.

Configure NetFlow settings

You must configure port and network settings on the EFC 1292v NetFlow virtual sensor before you can collect NetFlow records. The EFC 1292v sensor supports the following flow technologies: Cisco NetFlow v5/v9 and IPFIX.

You must log in as a user with System and Access Administration privileges IP to complete the following steps.

Required NetFlow fields

ExtraHop parses only NetFlow v5 fields, and all v5 fields must be present in records sent to the sensor.

Field	Description	
srcaddr	Source IP address	
dstaddr	Destination IP address	
nexthop	IP address of next hop router	
input	SNMP index of input interface	
output	SNMP index of output interface	
dPkts	Packets in the flow	
dOctets	Total number of Layer 3 bytes in the packets of the flow	
First	SysUptime at start of flow	
Last	SysUptime at the time the last packet of the flow was received	
srcport	TCP/UDP source port number or equivalent	
dstport	TCP/UDP destination port number or equivalent	
tcp_flags	Cumulative OR of TCP flags	
prot	IP protocol type (for example, TCP = 6; UDP = 17)	
tos	IP type of service (ToS)	
src_as	Autonomous system number of the source, either origin or peer	
dst_as	Autonomous system number of the destination, either origin or peer	
src_mask	Source address prefix mask bits	
dst_mask	Destination address prefix mask bits	

For more information, see NetFlow V5 formats Z.

Configure the flow type and UDP port

- 1. Log in to the Administration settings on the ExtraHop system through https://<extrahophostname-or-IP-address>/admin.
- 2. In the Network Settings section, click **NetFlow**.
- In the Ports section, from the Port field, type the UDP port number. The default port for Net Flow is 2055. You can add additional ports as needed for your environment.



Note: Port numbers must be 1024 or greater

- 4. From the Flow Type drop-down menu, select **NetFlow**.
- 5. Click the plus icon (+) to add the port.

Add approved networks

- 1. Log in to the Administration settings on the ExtraHop system through https://<extrahophostname-or-IP-address>/admin.
- 2. In the Network Settings section, click **NetFlow**.
- 3. In the Approved Networks section, click Add Approved Network.
- 4. From the Flow Type drop-down menu, select **NetFlow**.
- 5. For IP address, type the IPv4 or IPv6 address.
- 6. For Network ID, type a name to identify this approved network.
- 7. Click Save.

Discover NetFlow devices

You can configure the ExtraHop system to discover NetFlow devices by adding a range of IP addresses.

- =
- **Note:** ExtraHop systems do not support sampled NetFlow. Including sampled NetFlow in your traffic might result in inaccurate device metrics, but device discovery should still function as normal.

Here are some important considerations about Remote L3 Discovery:

- With NetFlow, devices that represent the gateways exporting records are automatically discovered. You can configure the ExtraHop system to discover devices that are representing the IP addresses observed in NetFlow records by adding a range of IP addresses.
- Exercise caution when specifying CIDR notation. A /24 subnet prefix might result in 255 new devices discovered by the ExtraHop system. A wide /16 subnet prefix might result in 65,535 new devices discovered, which might exceed your device limit.
- If an IP address is removed from the Device Discovery settings, the IP address will persist in the ExtraHop system as a remote L3 device as long as there are existing active flows for that IP address or until the capture is restarted. After a restart, the device is listed as an inactive remote L3 device.
- 1. Log in to the Administration settings on the ExtraHop system through https://<extrahophostname-or-IP-address>/admin.
- 2. In the Network Settings section, click **NetFlow**.
- 3. In the NetFlow Device Discovery section, type the IP address in the IP address ranges field.
 - You can specify one IP address or a CIDR notation, such as 192.168.0.0/24 for an IPv4 network or 2001:db8::/32 for an IPv6 network.
 - () Important: Every actively-communicating remote IP address that matches the CIDR block will be discovered as a single device in the ExtraHop system. Specifying wide subnet prefixes such as /16 might result in thousands of discovered devices, which might exceed your device limit.
- 4. Click the green plus icon (+) to add the IP address.

Next steps

You can add another IP address or range of IP addresses by repeating steps 3-4.

Post-deployment actions

Published: 2025-04-01

- Review the Sensor and console post-deployment checklist 🛛 and configure additional settings.
- Connect an ExtraHop console to an ExtraHop sensor 🖪