

# Deploy the ExtraHop Discover 3100, 6100, 8100, or 9100 Appliances

---

Published: 2018-07-10

This guide explains how to install the rack-mounted EDA 3100, EDA 6100, EDA 8100, and EDA 9100 ExtraHop Discover appliances.

## System requirements

Installation of the Discover appliance has the following requirements:

### EDA 3100

#### Appliance

1U of rack space and 495W of power

#### Network Access

Four 10/100/1000 BASE-T network ports

#### Remote management through iDRAC

One 10/100/1000 BASE-T network port

### EDA 6100

#### Appliance

1U of rack space and 495W of power

#### Network Access

Four 10/100/1000 BASE-T network ports and two 10G BASE-SR ports

#### Remote management through iDRAC

One 10/100/1000 BASE-T network port

### EDA 8100

#### Appliance

1U of rack space and 2x495W of power

#### Network Access

Four 10/100/1000 BASE-T network ports and two 10G BASE-SR ports

#### Remote management through iDRAC

One 10/100/1000 BASE-T network port

### EDA 9100

#### Appliance

2U of rack space and 2x750W of power

#### Network Access

Four 10/100/1000 BASE-T network ports and four 10G BASE-SR ports

#### Remote management through iDRAC

One 10/100/1000 BASE-T network port


## Set up the appliance

1. Rack mount the Discover appliance.

Install the Discover appliance in your data center with the included rack-mounting kit. The mounting kit supports most four-post racks with either round or square holes.

2. Connect the management port.

The Discover appliance contains four 10/100/1000 BASE-T network ports. Port 1 is the default management port and enables access to the ExtraHop Web interface. With a network patch cable, connect port 1 on the Discover appliance to your management network.

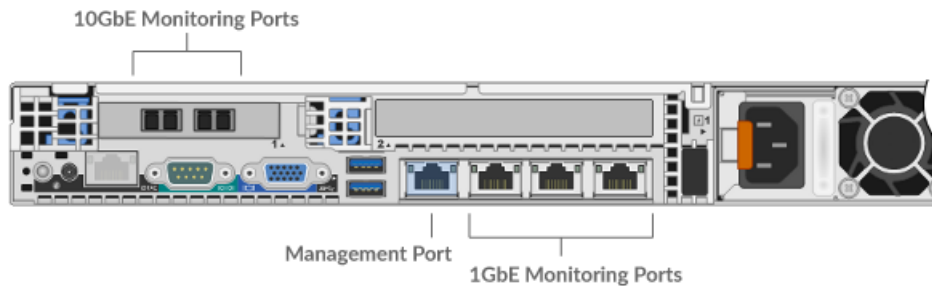

3. Optional: Connect the iDRAC port.

To enable remote management of the Discover appliance, connect your management network to the iDRAC port with a network patch cable.

4. Connect the power cords.

Connect the two supplied power cords to the power supplies on the back of the appliance, and then plug the cords into a power outlet. If the appliance does not power on automatically, press the power button on the front of the appliance.

## Configure an IP address

DHCP is enabled by default on the ExtraHop appliance. When you power on the appliance, interface 1 attempts to acquire an IP address through DHCP. If successful, the IP address appears on the home screen of the LCD. If an IP address has not been configured, the LCD displays `No IP`.

If your network does not support DHCP, you can configure a static IP address through the LCD menu on the front panel or through the command-line interface (CLI).

### Configure an IP address through the CLI

You can access the CLI by connecting a USB keyboard and SVGA monitor to the appliance or through an RS-232 serial cable and a terminal-emulator program. The terminal emulator must be set to 115200 bps with 8 data bits, no parity, 1 stop bit (8N1), and hardware flow control should be disabled.

1. Establish a connection to the ExtraHop appliance.
2. At the login prompt, type `shell` and then press ENTER.
3. At the password prompt, type the service tag number found on the pullout tab on the front of the appliance, and then press ENTER.
4. To configure the static IP address, run the following commands:

- a) Enable privileged commands:

```
enable
```

- b) At the `password` prompt, type the service tag number, and then press ENTER.

- c) Enter configuration mode:

```
configure
```

- d) Enter the interface configuration mode:

```
interface
```

- e) Run the `ip` command and specify the IP address and DNS settings in the following format: `ip ipaddr <ip_address> <netmask> <gateway> <dns_server>`

For example:

```
ip ipaddr 10.10.2.14 255.255.0.0 10.10.1.253 10.10.1.254
```

- f) Leave the interface configuration section:

```
exit
```

- g) Save the running config file:

```
running_config save
```

- h) Type `y` and then press ENTER.


## Configure a static IP address through the front panel

Complete the following steps to manually configure an IP address through the front panel LCD controls.

1. Make sure that the default management interface is connected to the network and the link status is active.
2. Press the select button (#) to begin.
3. Press the right arrow (>) button to select **Net** and then press the select button.
4. Press the right arrow button twice to highlight **DHCP** and then press the select button.
5. Press the right arrow button to select **Static** and then press the select button.
6. Press the right arrow button to select **IP** and then press the select button. The currently configured IP address appears.
7. Press the right arrow button until the first digit you want to change is highlighted.
8. Press the select button. The digit blinks when selected. While the digit is blinking, press the left arrow (<) or right arrow (>) button to change the digit value.
9. After you have chosen the correct digit, press the select button.
10. Repeat steps 7-9 for each remaining digit you want to change.
11. Press the left arrow button to navigate to the up arrow ↑ on the display and press the select button.
12. On the Save screen, select **Yes** and then press the select button.
13. Wait a moment to be redirected to the Net screen. Repeat the actions above to set the mask, gateway, and up to two DNS servers.
14. Optional: Configure the iDRAC DHCP, IP, mask, gateway, and DNS in the same manner as the IP address.

## Configure the Discover appliance

After you configure an IP address for the Discover appliance, you can log into the Admin UI on the Discover appliance through the following URL: `https://<discover_ip_address>/admin`. Then, complete these recommended procedures.


 **Note:** Log into the Admin UI with the `setup` user account. The password is the system serial number that appears in the `Info` section of the LCD display and on the label on the back of the appliance.

- [Register your ExtraHop appliance](#)
- [Configure the system time](#)
- [Configure email settings for notifications](#)
- Review the [Discover and Command Post-deployment Checklist](#)

## Register the ExtraHop appliance

Complete the following steps to apply a product key.

If you do not have a product key, contact your ExtraHop account team.

 **Tip:** To verify that your environment can resolve DNS entries for the ExtraHop licensing server, open a terminal application on your Windows, Linux, or Mac OS client and run the following command:

```
nslookup -type=NS d.extrahop.com
```

If the name resolution is successful, output similar to the following appears:

```
Non-authoritative answer:
d.extrahop.com nameserver = ns0.use.d.extrahop.com.
d.extrahop.com nameserver = ns0.usw.d.extrahop.com.
```

1. In your browser, type the URL of the ExtraHop Admin UI, `https://<extrahop_ip_address>/admin`.
2. Review the license agreement, select **I Agree**, and then click **Submit**.
3. On the login screen, type `setup` for the username.
4. For the password, select from the following options:
  - For 1U and 2U appliances, type the service tag number found on the pullout tab on the front of the appliance.
  - For the EDA 1100, type the serial number displayed in the `Appliance info` section of the LCD menu. The serial number is also printed on the bottom of the appliance.
  - For a virtual appliance, type `default`.
5. Click **Log In**.
6. In the Appliance Settings section, click **License**.
7. Click **Manage License**.
8. Click **Register**.
9. Enter the product key and then click **Register**.
10. Click **Done**.

## Configure the system time

By default, ExtraHop appliances synchronize the system time through the `pool.ntp.org` network time protocol (NTP) servers. If your network environment prevents the ExtraHop appliance from communicating with these time servers, you must configure an alternate time server source.

1. Log into the Admin UI on the extraHop appliance.
2. In the Appliance Settings section, click **System Time**.
3. Click **Configure Time**.
4. Click the Time Zone drop-down list and select a time zone.
5. Click **Save and Continue**.

6. On the Time Setup page, select one of the following options:

- Set time manually



**Note:** You cannot manually set the time on a Discover appliance if the Discover appliance is managed by a Command appliance.

- Set time with NTP server

7. Select the **Set time with NTP server** radio button, then click **Select**.

The `pool.ntp.org` public time server appears in the Time Server #1 field by default.

8. Type the IP address or fully qualified domain name (FQDN) for the time servers in the Time Server fields. You can add a maximum of nine time servers.



**Tip:** After adding the fifth time server, click **Add Server** to display up to four additional time server fields.

9. Click **Save**, and then click **Done**.


The NTP Status table displays a list of NTP servers that keep the system clock in sync. To sync the current system time a remote server, click the **Sync Now** button.

## Connect the monitoring port


With a network patch cable, connect the monitoring port on the Discover appliance to a network tap or mirror port on the switch.

Refer to the following diagrams.


### EDA 3100

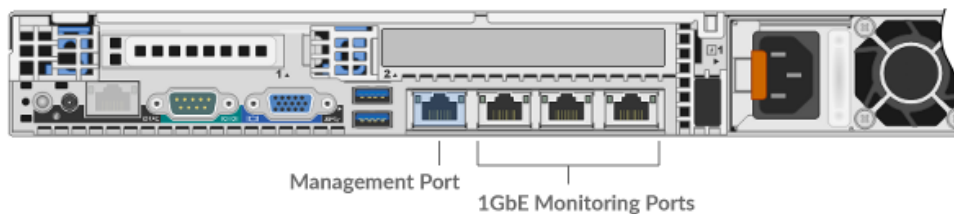


### EDA 6100

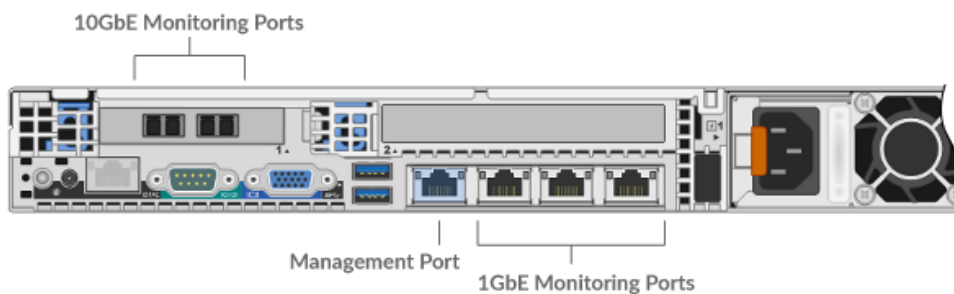

## EDA 8100

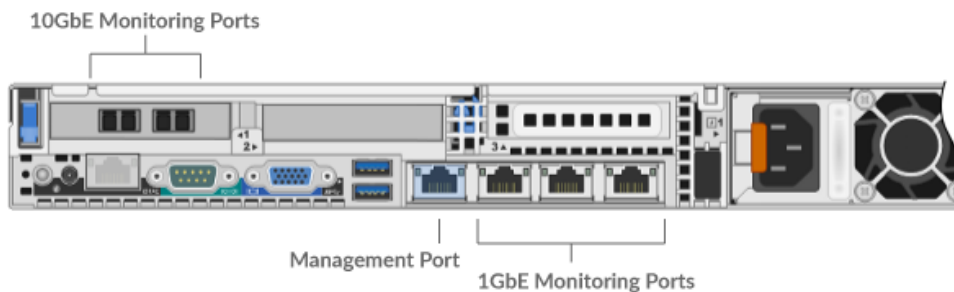

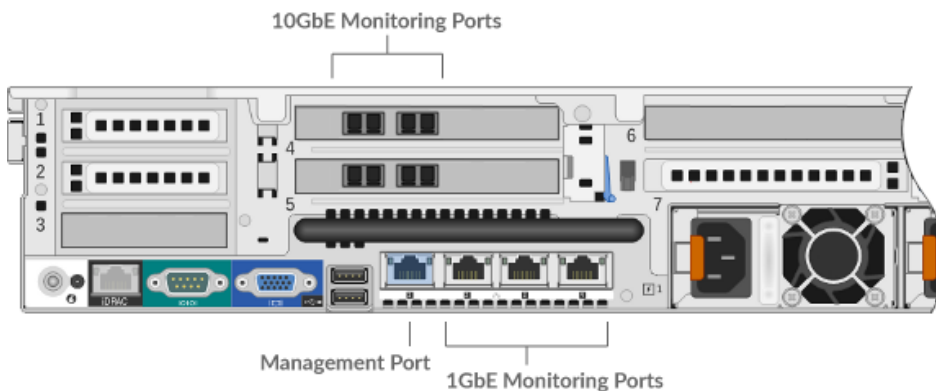

## EDA 9100



## Configure email settings

You must configure an email server and sender before the ExtraHop appliance can send notifications about system alerts by email.

1. In the Network Settings section, click **Notifications**.
2. Click **Email Server and Sender**.
3. Type the IP address or hostname for the outgoing SMTP mail server in the SMTP Server field.
  -  **Note:** The SMTP server should be the fully qualified domain name (FQDN) or IP address of an outgoing mail server that is accessible from the ExtraHop management network. If the DNS server is set, then the SMTP server can be a FQDN, otherwise it needs to be an IP address.
4. Type the port number for SMTP communication in the SMTP Port field. The default port number is 25.
5. Select one of the following encryption methods from the Encryption drop-down list:
  - **None.** SMTP communication is not encrypted.
  - **SSL/TLS.** SMTP communication is encrypted through the Secure Socket Layer/Transport Layer Security protocol.
  - **STARTTLS.** SMTP communication is encrypted through STARTTLS.
6. Type the email address for the notification sender in the Sender Address field.
  -  **Note:** The displayed sender address might be changed by the SMTP server. When sending through a Google SMTP server, for example, the sender email is changed to the username supplied for authentication, instead of the originally entered sender address.
7. Select Validate SSL Certificates to enable certificate validation. If you select this option, the certificate on the remote endpoint is validated against the root certificate chains specified by the trusted certificates manager. In addition, the host name specified in the certificate presented by the SMTP

server must match the host name specified in your SMTP configuration or validation will fail. You must configure which certificates you want to trust on the Trusted Certificates page. For more information, see [Add a trusted certificate to your ExtraHop appliance](#).

8. Type the email address for the report sender in the **Report Sender Address** field.
9. Select the Enable SMTP authentication checkbox and then type the SMTP server setup credentials in the Username and Password fields.
10. Click **Save**.

## Add an email notification group

Email notification groups are assigned to alerts to designate who should receive an email when that alert becomes active. Although you can specify individual email addresses to receive emails for alerts, email groups are the most effective way to manage your alert recipient list.

1. In the Network Settings section, click **Notifications**.
2. Click **Email Notification Groups**.
3. Click **Add Group**.
4. In the Group Info section, enter the following information:
  - **Name:** The name of the email group.
  - **System Health Notifications:** Select this checkbox if you want to send system storage alerts to the email group. These alerts are sent under the following conditions:
    - A virtual disk is in a degraded state.
    - A physical disk is in a degraded state.
    - A physical disk has an increasing error count.
    - A necessary role is missing, such as firmware, datastore, or packet capture.
5. In the Email Addresses text box, type the recipient email addresses for the team members that you want to receive the alert emails for this group. Email addresses can be entered one per line or separated by a comma, semicolon, or space. Email addresses are checked only for [name]@[company].[domain] format validation. There must be at least one email address in this text box for the group to be valid.
6. Click **Save**.

## Connect the Discover appliance to any Explore, Trace or Command appliances

If you have any ExtraHop Explore, Trace or Command appliances in your environment, you can connect the Discover appliance to the Command appliance or join the Discover appliance to an Explore or Trace appliance. For more information, see the [ExtraHop Admin UI Guide](#).

## Post-deployment actions

After you deploy the Discover appliance, review the [Discover and Command Post-deployment Checklist](#) and configure additional settings.