


Create a recordstore cluster

Published: 2022-07-15


For the best performance, data redundancy, and stability, you must configure at least three recordstores in a cluster.

-  **Important:** If you are creating a recordstore cluster with six or more nodes, you must configure the cluster with manager nodes. For manager node instructions, see [Deploying manager nodes](#).

In the following example, the recordstores have the following IP addresses:

- Node 1: 10.20.227.177
- Node 2: 10.20.227.178
- Node 3: 10.20.227.179

You will join nodes 2 and 3 to node 1 to create the recordstore cluster. All three nodes are data nodes. You cannot join a data node to a manager node or join a manager node to a data node to create a cluster.

-  **Important:** Each node that you join must have the same configuration (physical or virtual) and the same ExtraHop firmware version. EXA 5100 and EXA 5200 physical recordstores can be in the same cluster.

Before you begin

You must have already installed or provisioned the recordstores in your environment before proceeding.

1. Log in to the Administration settings on all three recordstores with the setup user account in three separate browser windows or tabs.
2. Select the browser window of node 1.
3. In the Status and Diagnostics section, click **Fingerprint** and note the fingerprint value. You will later confirm that the fingerprint for node 1 matches when you join the remaining two nodes.
4. Select the browser window of node 2.
5. In the Explore Cluster Settings section, click **Join Cluster**.
6. In the Host field, type the hostname or IP address of data node 1 and then click **Continue**.



Note: For cloud-based deployments, be sure to type the IP address listed in the Interfaces table on the Connectivity page.

7. Confirm that the fingerprint on this page matches the fingerprint you noted in step 3.

10.20.227.177 - ExtraHop Admin | 10.20.227.178 - Cluster Member | ExtraHop - Join

Not Secure | <https://10.20.227.219/admin/extra/join/2>

ExtraHop
Explore

Welcome

Admin > Join Cluster


Host: 10.20.227.177

Fingerprint: 0C:CF:FA:2D:93:D2:66:20:87:08:79:07:AE:A6:8E:26:61:82:29:0C:BC:7E:29:55:24:17:C9

Version: 7.4.0.1357

Setup Password:

- In the Setup Password field, type the password for the node 1 `setup` user account and then click **Join**. When the join is complete, the Explore Cluster Settings section has two new entries: **Cluster Members** and **Cluster Data Management**.
- Click Cluster Members. You should see node 1 and node 2 in the list.

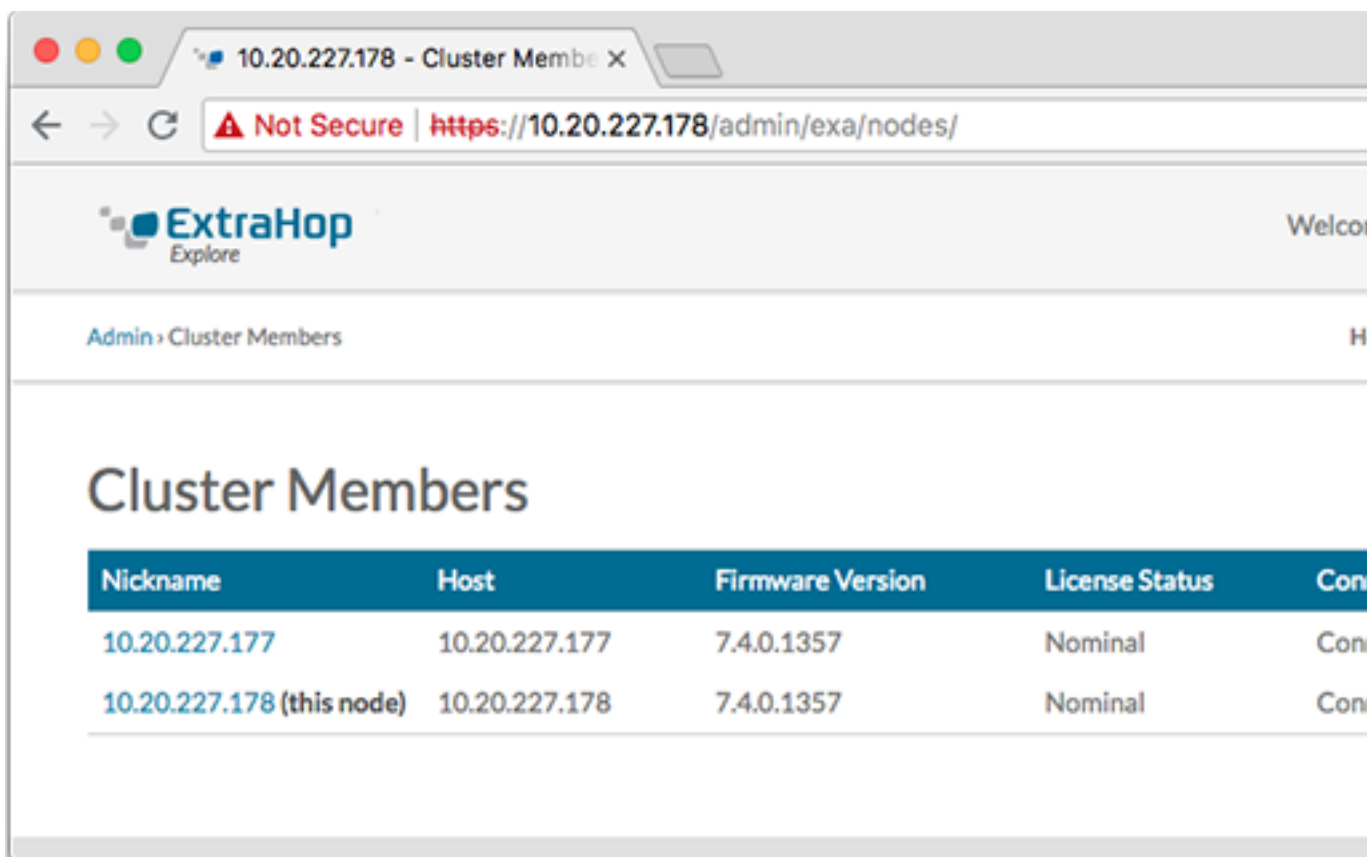


10. In the Status and Diagnostics section, click **Explore Cluster Status**. Wait for the Status field to change to **Green** before adding the next node.

11. Repeat steps 5 - 10 to join each additional node to the new cluster.



Note: To avoid creating multiple clusters, always join a new node to an existing cluster and not to another single appliance.

12. When you have added all of your recordstores to the cluster, click **Cluster Members** in the Explore Cluster Settings section. You should see all of the joined nodes in the list, similar to the following figure.

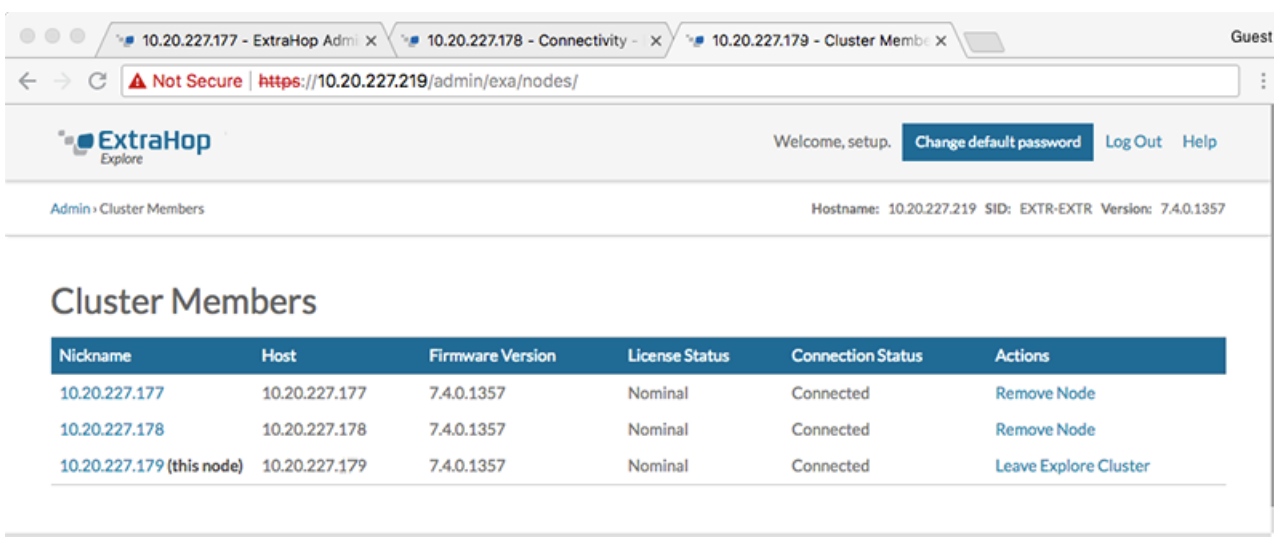

13. In the Explore Cluster Settings section, click **Cluster Data Management** and make sure that **Replication Level** is set to **1** and **Shard Reallocation** is **ON**.

Next steps

[Connect the console and sensors to ExtraHop recordstores](#) 