



# ExtraHop 9.7

## ExtraHop Explore Admin UI Guide

© 2024ExtraHop Networks, Inc. All rights reserved.

This manual in whole or in part, may not be reproduced, translated, or reduced to any machine-readable form without prior written approval from ExtraHop Networks, Inc.

For more documentation, see <https://docs.extrahop.com>.

Published: 2024-10-22

ExtraHop Networks  
Seattle, WA 98101  
877-333-9872 (US)  
+44 (0)203 7016850 (EMEA)  
+65-31585513 (APAC)  
[www.extrahop.com](http://www.extrahop.com)

# Contents

<b>Introduction to the ExtraHop Explore Admin UI</b>	<b>6</b>
Supported browsers	6
<b>Status and Diagnostics</b>	<b>7</b>
Health	7
Audit Log	9
Fingerprint	9
Advanced Options	9
Generate a new fingerprint	9
Configure externally signed SSL certificate	9
Support Scripts	10
Run the default support script	10
Run a custom support script	10
Explore Cluster Status	10
Delete records	11
Restore the cluster state	12
<b>Network Settings</b>	<b>13</b>
Connect to ExtraHop Cloud Services	13
Configure your firewall rules	14
Connect to ExtraHop Cloud Services through a proxy	15
Bypass certificate validation	15
Disconnect from ExtraHop Cloud Services	16
Manage ExtraHop Cloud Services enrollment	16
Connectivity	16
Configure an interface	17
Interface throughput	18
Set a static route	19
Enable IPv6 for an interface	19
Global proxy server	20
ExtraHop Cloud proxy	20
Bond interfaces	20
Create a bond interface	20
Modify bond interface settings	21
Destroy a bond interface	21
Notifications	22
Configure email settings for notifications	22
Add a new notification email address on an Explore or Trace appliance	23
Configure settings to send notifications to an SNMP manager	23
Download the ExtraHop SNMP MIB	24
Send system notifications to a remote syslog server	24
SSL Certificate	25
Upload an SSL certificate	25
Generate a self-signed certificate	26
Create a certificate signing request from your ExtraHop system	26
Trusted Certificates	27
Add a trusted certificate to your ExtraHop system	27

<b>Access Settings</b>	<b>28</b>
Passwords	28
Change the default password for the setup user	28
Support Access	28
Generate SSH key	28
Regenerate or revoke the SSH key	29
Users	29
Add a local user account	29
Users and user groups	30
Local users	30
Remote Authentication	30
Remote users	30
User groups	31
User privileges	31
Sessions	36
Remote Authentication	36
Configure remote authentication through LDAP	37
Configure user privileges for remote authentication	39
Configure remote authentication through RADIUS	40
Configure remote authentication through TACACS+	41
Configure the TACACS+ server	42
API Access	44
Manage API key access	44
Configure cross-origin resource sharing (CORS)	44
Generate an API key	45
Privilege levels	45
<b>Appliance Settings</b>	<b>49</b>
Running Config	49
Save system settings to the running configuration file	49
Edit the running configuration file	50
Download the running configuration as a text file	50
Disable ICMPv6 Destination Unreachable messages	50
Disable specific ICMPv6 Echo Reply messages	50
Services	51
SNMP Service	51
Firmware	51
Upgrade the firmware on your ExtraHop system	52
Pre-upgrade checklist	52
Upgrade the firmware on a console and sensor	53
Upgrade the firmware on recordstores	53
Upgrade the firmware on packetstores	54
Upgrade connected sensors in RevealX 360	54
System Time	55
Configure the system time	56
Shutdown or restart	56
Restart an Explore appliance component	57
License	57
Register your ExtraHop system	57
Register the appliance	57
Troubleshoot license server connectivity	58
Apply an updated license	58
Update a license	59
Disks	59

<b>Explore Cluster Settings</b>	<b>61</b>
Create a recordstore cluster	61
Recordstore cluster guidelines	64
Cluster Members	64
Remove a node from the cluster	65
Manager and Connected Appliances	65
Cluster Data Management	65
Connect to a Command appliance	66
Restore the cluster state	66

# Introduction to the ExtraHop Explore Admin UI

The ExtraHop Explore Admin UI Guide provides detailed information about the administrator features and functionality for the Explore appliance.

In addition, this guide provides an overview of the global navigation and information about the controls, fields, and options available throughout the Explore Administration settings.


After you have deployed your ExtraHop recordstore, see the [Explore Post-deployment Checklist](#).

We value your feedback. Please let us know how we can improve this document. Send your comments or suggestions to [documentation@extrahop.com](mailto:documentation@extrahop.com).

## Supported browsers

The following browsers are compatible with all ExtraHop systems. Apply the accessibility and compatibility features provided by your browser to access content through assistive technology tools.

- Firefox
- Google Chrome
- Microsoft Edge
- Safari

 **Important:** Internet Explorer 11 is no longer supported. We recommend that you install the latest version of any supported browser.

## Status and Diagnostics

The Status and Diagnostics page displays metrics and logging data about the current state of the Explore appliance and enables system administrators to view the overall system health.

### Health

Provides metrics to view the operating efficiency of the Explore appliance.

### Audit Log

Enables you to view event logging data and to change syslog settings

### Fingerprint

Provides the unique hardware fingerprint for the Explore appliance.

### Support Scripts

Enables you to upload and run support scripts.

### Explore Cluster Status

Provides status information about the cluster, including indices.

## Health

The Health page provides a collection of metrics that enable you check the operation of the Explore appliance.

The metrics on this page can help you troubleshoot problems and determine why the ExtraHop appliance is not performing as expected.

### System

Reports the following information about the system CPU usage and disk drives.

#### CPU User

Specifies the percentage of CPU usage associated with the Explore appliance user

#### CPU System

Specifies the percentage of CPU usage associated with the Explore appliance.

#### CPU Idle

Identifies the CPU idle percentage associated with the Explore appliance.

#### CPU IO

Specifies the percentage of CPU usage associated with the Explore appliance IO functions.

### Service Status

Reports the status of Explore appliance system services

#### exadmin

Specifies the amount of time the Explore appliance web portal service has been running.

#### exconfig

Specifies the amount of time the Explore appliance config service has been running

#### exreceiver

Specifies the amount of time the Explore appliance receiver service has been running.

#### exsearch

Specifies that amount of time that the Explore appliance search service has been running.

### Interfaces

Reports the status of Explore appliance network interfaces.

**RX packets**

Specifies the number of packets received by the Explore appliance on the specified interface.

**RX Errors**

Specifies the number of received packet errors on the specified interface.

**RX Drops**

Specifies the number of received packets dropped on the specified interface.

**TX Packets**

Specifies the number of packets transmitted by the Explore appliance on the specified interface.

**TX Errors**

Specifies the number of transmitted packet errors on the specified interface.

**TX Drops**

Specifies the number of transmitted packets dropped on the specified interface.

**RX Bytes**

Specifies the number of bytes received by the Explore appliance on the specified interface.

**TX Bytes**

Specifies the number of bytes transmitted by the Explore appliance on the specified interface.

**Partitions**

Reports the status and usage of Explore appliance components. The configuration settings for these components are stored on disk and retained even when the power to the appliance is turned off.

**Name**

Specifies the Explore appliance settings that are stored on disk.

**Options**

Specifies the read-write options for the settings stored on disk.

**Size**

Specifies the size in gigabytes for the identified component.

**Utilization**

Specifies the amount of memory usage for each of the components as a quantity and as percentage of total disk space.

**Record Sources**

Displays metrics about the records that are sent from the Discover appliance to the Explore cluster.

**Source EDA**

Displays the name of the Discover appliance that is sending records to the Explore cluster.

**Last Update**

Displays the timestamp when record collection began. The value is reset automatically every 24 hours or whenever the Explore appliance is restarted.

**RX Bytes**

Displays the number of compressed record bytes received from the Discover appliance.

**Record Bytes**

Displays the number of bytes received from the Discover appliance.

**Record Bytes Saved**

Displays the number of bytes successfully saved to the Explore appliance.

**Records Saved**

Displays the number of records successfully saved to the Explore appliance.



**Record Errors**

Displays the number of individual record transfers that resulted in an error. This value indicates the number of records that did not transfer successfully from the exreceiver process.

**TXN Errors**

Displays the number of bulk record transactions that resulted in an error. Errors in this field might indicate missing records.

**TXN Drops**

Displays the number of bulk records transactions that did not complete successfully. All records in the transaction are missing.

## Audit Log

The audit log provides data about the operations of your ExtraHop system, broken down by component. The audit log lists all known events by timestamp, in reverse chronological order.

If you experience an issue with the ExtraHop system, consult the audit log to view detailed diagnostic data to determine what might have caused the issue.

## Fingerprint

Fingerprints help secure appliances from machine-in-the-middle attacks by providing a unique identifier that can be verified when connecting ExtraHop appliances.

When connecting an ExtraHop recordstore or packetstore with a packet sensor or console, make sure that the fingerprint displayed is exactly the same as the fingerprint shown on the join or pairing page.

If the fingerprints do not match, communications between the devices might have been intercepted and altered.

## Advanced Options

On Explore appliances, you can configure an externally signed certificate. Signed certificates can enable you to meet the compliance needs of your company. The fingerprint is automatically re-generated.

By default, the fingerprint is derived from the public key of the internal SSL certificate. This separate SSL certificate only encrypts communications between ExtraHop appliances and is not required for communication between ExtraHop appliances and external HTTP clients.

**Generate a new fingerprint**

**Note:** You do not need to generate a fingerprint before you configure an externally signed certificate.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. Click **Fingerprint**.
3. Click **Advanced Options**.
4. Click **Generate new fingerprint**.
5. Click **OK**.

**Configure externally signed SSL certificate**

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. Click **Fingerprint**.
3. Click **Advanced Options**.

4. Click **Configure externally signed SSL certificate**.
5. Copy the certificate request from the text box and submit it to your Certificate Authority (CA).
6. After you receive the signed SSL certificate from your CA, return to the Configure Externally-signed SSL Certificate page in the Administration settings and paste the content of the certificate file (.crt) into the second text box.
7. Click **Install**.  
After the certificate is installed, a new fingerprint is generated from the newly added public key.
8. Repeat these steps for all other Explore appliances in the cluster.

## Support Scripts

ExtraHop Support might provide a support script that can apply a special setting, make a small adjustment to the ExtraHop system, or provide help with remote support or enhanced settings. The Administration settings enable you to upload and run support scripts.

### Run the default support script

The default support script gathers information about the state of the ExtraHop system for analysis by ExtraHop Support.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Status and Diagnostics section, click **Support Scripts**.
3. Click **Run Default Support Script**.
4. Click **Run**.  
When the script completes, the Support Script Results page appears.
5. Click the name of the diagnostic support package that you want to download.  
The file saves to the default download location on your computer.  
Send this file, typically named `diag-results-complete.expk`, to ExtraHop Support.

The `.expk` file is encrypted and the contents are only viewable by ExtraHop Support. However, you can download the `diag-results-complete.manifest` file to view a list of the files collected.

### Run a custom support script

If you receive a custom support script from ExtraHop Support complete the following procedure to make a small adjustment to the system or apply enhanced settings.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Status and Diagnostics section, click **Support Scripts**.
3. Click **Run Custom Support Script**.
4. Click **Choose File**, navigate to the diagnostic support script you want to upload, and then click **Open**.
5. Click **Upload** to run the file on the ExtraHop system.  
ExtraHop Support will confirm that the support script achieved the desired results.

## Explore Cluster Status

The Explore Cluster Status page provides details about the health of the Explore appliance.

The metrics on this page can help you troubleshoot problems and determine why the Explore cluster is not performing as expected. In addition, you can [delete a set of records](#) by date from this page.

### Index Summary

Displays metrics related to the number of indices, shards, and primary records stored on the appliance.

### Cluster Node Summary

Displays the number of dedicated manager-only nodes, dedicated data-only nodes, and data eligible manager-only nodes in the Explore cluster.

### Index Details

#### Date (UTC)

Displays the date the index was created.

#### ID

Displays the ID of the index. An ID other than 0 means that an index with the same date, but from a different source exists on the cluster.

#### Source

Displays the hostname or IP address of the Discover appliance where the record data originated.

#### Records

Displays the total number of records sent to the Explore appliance.

#### Size

Displays the size of the index.

#### Status

Displays the replication status of data on the cluster.

#### Shards

Displays the number of shards in the index.

#### Unallocated Shards

Displays the number of shards that have not been allocated to a node. Unallocated shards are typically replica shards that must be kept on a different node than the node with the corresponding primary shard, but there are not enough nodes in the cluster. For example, a cluster with just one member will not have a place to store the replica shards, so with the default replication level of 1, the index will always have unassigned shards and have a `yellow` status.

#### Relocating Shards

Displays the number of shards that are moving from one node to another. Relocating shards typically occurs when an Explore node in the cluster fails.

## Delete records

In certain circumstances, such as moving an Explore cluster from one network to another, you might want to delete all of the records from a cluster.

You can delete records by index, which is a collection of records that were created on the same day. Indexes are named according to the following pattern:

```
<node-id>-<date>-<index-id>
```

For example, an index dated `2016-5-16` contains records that were created on May 16, 2016 (dates are specified in UTC). You can delete all data for a given day or span of days; for example, you might want to delete record content that you know contains sensitive information.



1. In the Status and Diagnostics section, click **Explore Cluster Status**.
2. In the Index Details section, select the checkbox for each index that you want to delete.  
The Source column displays the name of the sensor that collected the data.

3. Click **Delete Selected**.
4. Click **OK**.

## Restore the cluster state

In rare instances, the Explore cluster might not recover from a `Red` status, as seen in the `Status` section on the `Explore Cluster Status` page. When this state occurs, it is possible to restore the cluster to a `Green` state.

When you restore the cluster state, the Explore cluster is updated with the latest stored information about the Explore nodes in the cluster and all other connected `Discover` and `Command` appliances.

 **Important:** If you have recently restarted your Explore cluster, it might take an hour before the cluster status `Green` appears, and restoring the cluster might not be necessary. If you are unsure whether you should restore the cluster state, contact [ExtraHop Support](#) .

1. In the `Explore Cluster Settings` section, click **Restore Cluster State**.
2. On the `Restore Cluster State` page, click **Restore Cluster State**.
3. Click **Restore Cluster** to confirm.

# Network Settings

The Network Settings section includes the following configurable network connectivity settings.

## Connectivity

Configure network connections.

## SSL Certificate

Generate and upload a self-signed certificate.

## Notifications

Set up alert notifications through email and SNMP traps.

The Explore appliance has four 10/100/1000baseT network ports and two 10GbE SFP+ network ports. By default, the Gb1 port is configured as the management port and requires an IP address. The Gb2, Gb3 and Gb4 ports are disabled and not configurable.

You can configure either of the 10GbE networks ports as the management port, but you can only have one management port enabled at a time.

Before you begin configuring the network settings on an Explore appliance, verify that a network patch cable connects the Gb1 port on the Explore appliance to the management network. For more information about installing an Explore appliance, refer to the [Deploy the EXA 5200 recordstore](#) guide or contact ExtraHop Support for assistance.

For specifications, installation guides, and more information about your appliance, refer to [docs.extrahop.com](https://docs.extrahop.com).

## Connect to ExtraHop Cloud Services

ExtraHop Cloud Services provides access to ExtraHop cloud-based services through an encrypted connection.

Your system license determines which services are available for your ExtraHop console or sensor. A single license can only be applied to a single appliance or virtual machine (VM) at a time. If you want to repurpose a license from one appliance or VM to another, you can [manage system enrollment](#) from the ExtraHop Cloud Services page.

After the connection is established, information about the available services appear on the ExtraHop Cloud Services page.

- By sharing data with ExtraHop Machine Learning Service, you can enable features that enhance the ExtraHop system and your user experience.
  - Enable AI Search Assistant to find devices with natural language user prompts, which are shared with ExtraHop Cloud Services for product improvement. See the [AI Search Assistant FAQ](#) for more information. AI Search Assistant cannot currently be enabled for the following regions:
    - Asia Pacific (Singapore, Sydney, Tokyo)
    - Europe (Frankfurt, Paris)
  - Opt in to Expanded Threat Intelligence to enable the Machine Learning Service to review data such as IP addresses and hostnames against threat intelligence provided by CrowdStrike, benign endpoints, and other network traffic information. See the [Expanded Threat Intelligence FAQ](#) for more information.
  - Contribute data such as file hashes and external IP addresses to Collective Threat Analysis to improve the accuracy of detections. See the [Collective Threat Analysis FAQ](#) for more information.

- ExtraHop Update Service enables automatic updates of resources to the ExtraHop system, such as ransomware packages.
- ExtraHop Remote Access enables you to allow ExtraHop account team members and ExtraHop Support to connect to your ExtraHop system for configuration help. See the [Remote Access FAQ](#) for more information about remote access users.

 **Video** the related training: [Connect to ExtraHop Cloud Services](#)

### Before you begin

- RevealX 360 systems are automatically connected to ExtraHop Cloud Services, however, you might need to [allow access through network firewalls](#).
  - You must apply the relevant license on the ExtraHop system before you can connect to ExtraHop Cloud Services. See the [License FAQ](#) for more information.
  - You must have setup or [system and access administration privileges](#) to access Administration settings.
1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
  2. In the Network Settings section, click **ExtraHop Cloud Services**.
  3. Click **Terms and Conditions** to read the content.
  4. Read the terms and conditions, and then select the checkbox.
  5. Click **Connect to ExtraHop Cloud Services**.  
After you are connected, the page updates to show status and connection information for each service.
  6. (Optional) In the Machine Learning Service section, select one or more enhanced features:
    - Enable AI Search Assistant by selecting **I agree to enable AI search assistant and send natural language searches to ExtraHop Cloud Services**. (NDR module required)
    - Enable Expanded Threat Intelligence by selecting **I agree to send IP addresses, domain names, hostnames, file hashes, and URLs to ExtraHop Cloud Services**.
    - Enable Collective Threat Analysis by selecting **I agree to contribute domain names, hostnames, file hashes, and external IP addresses to ExtraHop Cloud Services**.

If the connection fails, there might be an issue with your firewall rules.

## Configure your firewall rules

If your ExtraHop system is deployed in an environment with a firewall, you must open access to ExtraHop Cloud Services. For RevealX 360 systems that are connected to self-managed sensors, you must also open access to the cloud-based recordstore included with RevealX Standard Investigation

### Open access to Cloud Services

For access to ExtraHop Cloud Services, your sensors must be able to resolve DNS queries for \*.extrahop.com and access TCP 443 (HTTPS) from the IP address that corresponds to your sensor license:

- 35.161.154.247 (Portland, U.S.A.)
- 54.66.242.25 (Sydney, Australia)
- 52.59.110.168 (Frankfurt, Germany)

### Open access for the ExtraHop recordstore

For access to the cloud-based recordstore included with RevealX Standard Investigation, your sensors must be able to access outbound TCP 443 (HTTPS) to these fully-qualified domain names:

- bigquery.googleapis.com
- bigquerystorage.googleapis.com
- oauth2.googleapis.com
- www.googleapis.com

- `www.mtls.googleapis.com`
- `iamcredentials.googleapis.com`

You can also review the public guidance from Google about [computing possible IP address ranges](#) for `googleapis.com`.


In addition to configuring access to these domains, you must also configure the [global proxy server settings](#).

## Connect to ExtraHop Cloud Services through a proxy

If you do not have a direct internet connection, you can try connecting to ExtraHop Cloud Services through an explicit proxy.

### Before you begin

Verify whether your proxy vendor is configured to perform machine-in-the-middle (MITM) when tunneling SSH over HTTP CONNECT to `localhost:22`. ExtraHop Cloud Services deploys an encrypted inner SSH tunnel, so traffic will not be visible to MITM inspection. We recommend that you create a security exception and disable MITM inspection for this traffic.


 **Important:** If you are unable to disable MITM on your proxy, you must disable certificate validation in the ExtraHop system running configuration file. For more information, see [Bypass certificate validation](#).

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **Connectivity**.
3. Click **Enable ExtraHop Cloud Proxy**.
4. In the Hostname field, type the hostname for your proxy server, such as `proxyhost`.
5. In the Port field, type the port for your proxy server, such as `8080`.
6. (Optional) If required, in the Username and Password fields, type a user name and password for your proxy server.
7. Click **Save**.

## Bypass certificate validation

Some environments are configured so that encrypted traffic cannot leave the network without inspection by a third-party device. This device can act as an SSL/TLS endpoint that decrypts and re-encrypts the traffic before sending the packets to ExtraHop Cloud Services.

If a system is connecting to ExtraHop Cloud Services through a proxy server and the certificate validation fails, disable certificate validation and attempt the connection again. The security provided by ExtraHop system authentication and encryption ensures that communication between systems and ExtraHop Cloud services cannot be intercepted.

 **Note:** The following procedure requires familiarity with modifying the ExtraHop running configuration file.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Appliance Settings section, click **Running Config**.
3. Click **Edit config**.
4. Add the following line to the end of the running configuration file:

```
"hopcloud": { "verify_outer_tunnel_cert": false }
```

5. Click **Update**.
6. Click **View and Save Changes**.
7. Review the changes.
8. Click **Save**.

9. Click **Done**.

## Disconnect from ExtraHop Cloud Services

You can disconnect an ExtraHop system from ExtraHop Cloud Services.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **ExtraHop Cloud Services**.
3. In the Cloud Services Connection section, click **Disconnect**.

## Manage ExtraHop Cloud Services enrollment

If you want to move an existing license from one ExtraHop system to another, you can manage system enrollment from the ExtraHop Cloud Services page. Unenrolling a system deletes all data and historical analysis for the Machine Learning Service from the system and will no longer be available.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **ExtraHop Cloud Services**.
3. In the Cloud Services Connection section, click **Unenroll**.

## Connectivity

The Connectivity page contains controls for your appliance connections and network settings.

### Interface Status

On physical appliances, a diagram of interface connections appears, which updates dynamically based on the port status.

- The blue Ethernet port is for management
- A black Ethernet port indicates a licensed and enabled port that is currently down
- A green Ethernet port indicates an active, connected port
- A gray Ethernet port indicates a disabled or unlicensed port

### Network Settings

- Click **Change Settings** to add a hostname for your ExtraHop appliance or to add DNS servers.

### Proxy Settings

- Enable a **global proxy** to connect to an ExtraHop console
- Enable a **cloud proxy** to connect to ExtraHop Cloud Services

### Bond Interface Settings

- Create a **bond interface** to bond multiple interfaces together into one logical interface with a single IP address.

### Interfaces

View and configure your management and monitoring interfaces. Click any interface to display setting options.

- [Collect traffic from NetFlow and sFlow devices](#)
- [Packet Forwarding with RPCAP](#)

### Netskope Settings

- [Enable Netskope packet ingest](#) on your sensor to discover and monitor devices through a Netskope integration.



## Configure an interface

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **Connectivity**.
3. In the Interfaces section, click the name of the interface you want to configure.
4. On the Network Settings for Interface `<interface number>` page, from the **Interface Mode** drop-down list, select one of the following options:

### Disabled

The interface is disabled.

### Monitoring (receive only)

Monitors network traffic.

### Management

Manages the ExtraHop sensor.

### Management + RPCAP/ERSPAN/VXLAN/GENEVE Target

Manages the ExtraHop sensor and captures traffic forwarded from a packet forwarder, ERSPAN\*, VXLAN\*\*, or GENEVE\*\*\*.

While 10 GbE management + capture interfaces on this sensor can conduct management functions at 10 Gbps speeds, processing traffic such as ERSPAN, VXLAN, and GENEVE is limited to 1 Gbps.



**Tip:** In environments with asymmetric routing adjacent to the high-performance interfaces, ping replies might not get back to the sender.

### High-Performance ERSPAN/VXLAN/GENEVE Target

Captures traffic forwarded from ERSPAN \*, VXLAN\*\*, or GENEVE\*\*\*. This interface mode enables the port to handle more than 1 Gbps. Set this interface mode if the ExtraHop sensor has a 10 GbE port. This interface mode only requires that you configure an IPv4 address.

\* The ExtraHop system supports the following ERSPAN implementations:

- ERSPAN Type I
- ERSPAN Type II
- ERSPAN Type III
- Transparent Ethernet Bridging. ERSPAN-like encapsulation commonly found in virtual switch implementations such as the VMware VDS and Open vSwitch.

\*\*Virtual Extensible LAN (VXLAN) packets are received on UDP port 4789.

\*\*\*Generic Network Virtualization Encapsulation (GENEVE) packets are received on UDP port 6081. To configure GENEVE-encapsulated traffic forwarded from an AWS Gateway Load Balancer (GWLB) acting as a VPC Traffic Mirroring target, see the [AWS documentation](#).



**Note:** For Amazon Web Services (AWS) deployments with one interface, you must select **Management + RPCAP/ERSPAN/VXLAN/GENEVE Target** for Interface 1. If you are configuring two interfaces, you must select **Management + RPCAP/ERSPAN/VXLAN/GENEVE Target** for Interface 1 and **Management + RPCAP/ERSPAN/VXLAN/GENEVE Target** for Interface 2.




**Note:** For Azure deployments, some instances running older NICs might not support High-Performance ERSPAN/VXLAN/GENEVE Target mode.

5. (Optional) Select an interface speed.
 

**Auto-negotiate** is selected by default; however, you should manually select a speed if it is supported on your sensor, network transceiver, and network switch.

  - **Auto-negotiate**
  - **10 Gbps**

- 25 Gbps
- 40 Gbps
- 100 Gbps

 **Important:** When you change the interface speed to **Auto-negotiate**, you might need to restart the sensor before the change takes effect.


- (Optional) Select a forward error correction (FEC) type.

We recommend Auto-negotiate, which is optimal for most environments.

- **Auto-negotiate:** Automatically enables either RS-FEC or Firecode FEC or disables FEC based on the capabilities of connected interfaces.
- **RS-FEC:** Always enables Reed-Solomon FEC.
- **Firecode:** Always enables Firecode (FC) FEC, also known as BaseR FEC.
- **Disabled:** Disables FEC.

- Configure DHCP.

DHCPv4 is enabled by default. If your network does not support DHCP, you can clear the **DHCPv4** checkbox to disable DHCP and then type a static IP address, netmask, and default gateway.

 **Note:** Only one interface should be configured with a default gateway. [Configure static routes](#) if your network requires routing through multiple gateways.

- Configure the TCP health check port.

This setting is only configurable on high-performance interfaces and is required when ingesting GENEVE traffic from an AWS Gateway Load Balancer (GWLB). The port number value must match the value configured in AWS. For more information, see [Forward GENEVE-encapsulated traffic from an AWS Gateway Load Balancer](#).

- (Optional) Enable IPv6.

For more information about configuring IPv6, see [Enable IPv6 for an interface](#).

- (Optional) Manually add routes.

- Click **Save**.

### Interface throughput

ExtraHop sensor models EDA 6100, EDA 8100, and EDA 9100 are optimized to capture traffic exclusively on 10GbE ports.

Enabling the 1GbE interfaces for monitoring traffic can impact performance, depending on the ExtraHop sensor. While you can optimize these sensors to capture traffic simultaneously on both the 10GbE ports and the three non-management 1GbE ports, we recommend that you contact ExtraHop Support for assistance to avoid reduced throughput.

 **Note:** EDA 6200, EDA 8200, EDA 9200, and EDA 10200 sensors are not susceptible to reduced throughput if you enable 1GbE interfaces for monitoring traffic.

ExtraHop Sensor	Throughput	Details
EDA 9100	Standard 40Gbps throughput	If the non-management 1GbE interfaces are disabled, you can use up to four of the 10GbE interfaces for a combined throughput of up to 40Gbps.
EDA 8100	Standard 20Gbps throughput	If the non-management 1GbE interfaces are disabled, you can use either one or both of the 10GbE interfaces for a combined throughput of up to 20Gbps.

ExtraHop Sensor	Throughput	Details
EDA 6100	Standard 10Gbps throughput	If the non-management 1GbE interfaces are disabled, the maximum total combined throughput is 10Gbps.
EDA 3100	Standard 3Gbps throughput	No 10GbE interface
EDA 1100	Standard 1Gbps throughput	No 10GbE interface


## Set a static route

### Before you begin

You must disable DHCPv4 before you can add a static route.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **Connectivity**.
3. In the Interfaces section, click the name of the interface you want to configure.
4. On the Network Settings for Interface <interface number> page, ensure that the **IPv4 Address** and **Netmask** fields are complete and saved, and click **Edit Routes**.
5. In the Add Route section, type a network address range in CIDR notation in the **Network** field and IPv4 address in the **Via IP** field and then click **Add**.
6. Repeat the previous step for each route you want to add.
7. Click **Save**.

### Enable IPv6 for an interface

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **Connectivity**.
3. In the Interfaces section, click the name of the interface you want to configure.
4. On the Network Settings for Interface <interface number> page, select **Enable IPv6**. IPv6 configuration options appear below **Enable IPv6**.
5. (Optional) Configure IPv6 addresses for the interface.
  - To automatically assign IPv6 addresses through DHCPv6, select **Enable DHCPv6**.
    -  **Note:** If enabled, DHCPv6 will be used to configure DNS settings.
  - To automatically assign IPv6 addresses through stateless address autoconfiguration, from the **Stateless Address Autoconfiguration** drop-down list, select one of the following options:
    - Use MAC address**  
Configures the appliance to automatically assign IPv6 addresses based on the MAC address of the appliance.
    - Use stable private address**  
Configures the appliance to automatically assign private IPv6 addresses that are not based on hardware addresses. This method is described in RFC 7217.
  - To manually assign one or more static IPv6 addresses, type the addresses in the Static IPv6 Addresses field.
6. To enable the appliance to configure Recursive DNS Server (RDNSS) and DNS Search List (DNSSL) information according to router advertisements, select **RDNSS/DNSSL**.
7. Click **Save**.

## Global proxy server

If your network topology requires a proxy server to enable your ExtraHop system to communicate either with a console or with other devices outside of the local network, you can enable your ExtraHop system to connect to a proxy server you already have on your network. Internet connectivity is not required for the global proxy server.

## ExtraHop Cloud proxy

If your ExtraHop system does not have a direct internet connection, you can connect to the internet through a proxy server specifically designated for ExtraHop Cloud services connectivity. Only one proxy can be configured per system.

Complete the following fields and click **Save** to enable a cloud proxy.

- **Hostname:** The hostname or IP address for your cloud proxy server.
- **Port:** The port number for your cloud proxy server.
- **Username:** The name of a user that has for access to your cloud proxy server.
- **Password:** The password for the user specified above.

## Bond interfaces

You can bond multiple interfaces on your ExtraHop system together into a single logical interface that has one IP address for the combined bandwidth of the member interfaces. Bonding interfaces enable a larger throughput with a single IP address. This configuration is also known as link aggregation, port channeling, link bundling, Ethernet/network/NIC bonding, or NIC teaming. Bond interfaces cannot be set to monitoring mode.



**Note:** When you modify bond interface settings, you lose connectivity to your ExtraHop system. You must make changes to your network switch configuration to restore connectivity. The changes required are dependent on your switch. Contact ExtraHop Support for assistance before you create a bond interface.

- Bonding is only configurable on Management or Management + interfaces.
- [Port channeling](#) on traffic monitoring ports is supported on the ExtraHop sensors.

Interfaces chosen as members of a bond interface are no longer independently configurable and are shown as Disabled (bond member) in the Interfaces section of the Connectivity page. After a bond interface is created, you cannot add more members or delete existing members. The bond interface must be destroyed and recreated.

- [Create a bond interface](#)
- [Modify a bond interface](#)
- [Destroy a bond interface](#)

### Create a bond interface

You can create a bond interface with at least one interface member and up to the number of members that are available for bonding.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **Connectivity**.
3. In the Bond Interface Settings section, click **Create Bond Interface**.
4. Select the checkbox next to each interface you want to include in the bonding.  
Only ports that are currently available for bond membership appear.
5. From the **Take Settings From** drop-down list, select the interface that has the settings you want to apply to the bond interface.

Settings for all non-selected interfaces will be lost.

6. For **Bond Type**, select one of the following options:
  - **Static**, which creates a static bond.
  - **802.3ad (LACP)**, which creates a dynamic bond through IEEE 802.3ad Link Aggregation (LACP).
7. From the **Hash Policy** drop-down list, select one of the following options:
  - **Layer 3+4** policy, which balances the distribution of traffic more evenly across interfaces; however, this policy is not fully compliant with 802.3ad standards.
  - **Layer 2+3** policy, which balances traffic less evenly and is compliant with 802.3ad standards.
8. Click **Create**.

Refresh the page to display the Bond Interfaces section. Any bond interface member whose settings were not selected in the **Take Settings From** drop-down list are shown as **Disabled (bond member)** in the Interfaces section.

### Modify bond interface settings

After a bond interface is created, you can modify most settings as if the bond interface is a single interface.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **Connectivity**.
3. In the Bond Interfaces section, click the bond interface you want to modify.
4. On the Network Settings for Bond Interface *<interface number>* page, modify the following settings as needed:
  - **Members:** The interface members of the bond interface. Members cannot be changed after a bond interface is created. If you need to change the members, you must destroy and recreate the bond interface.
  - **Bond Mode:** Specify whether to create a static bond or a dynamic bond through IEEE 802.3ad Link Aggregation (LACP).
  - **Interface Mode:** The mode of the bond membership. A bond interface can be **Management** or **Management+RPCAP/ERSPAN Target** only.
  - **Enable DHCPv4:** If DHCP is enabled, an IP address for the bond interface is automatically obtained.
  - **Hash Policy:** Specify the hash policy. The **Layer 3+4** policy balances the distribution of traffic more evenly across interfaces; however, it is not fully compliant with 802.3ad standards. The **Layer 2+3** policy balances traffic less evenly; however, it is compliant with 802.3ad standards.
  - **IPv4 Address:** The static IP address of the bond interface. This setting is unavailable if DHCP is enabled.
  - **Netmask:** The network netmask for the bond interface.
  - **Gateway:** The IP address of the network gateway.
  - **Routes:** The static routes for the bond interface. This setting is unavailable if DHCP is enabled.
  - **Enable IPv6:** Enable configuration options for IPv6.
5. Click **Save**.

### Destroy a bond interface

When a bond interface is destroyed, the separate interface members of the bond interface return to independent interface functionality. One member interface is selected to retain the interface settings for the bond interface and all other member interfaces are disabled. If no member interface is selected to retain the settings, the settings are lost and all member interfaces are disabled.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **Connectivity**.

3. In the Bond Interfaces section, click the red **X** next to the interface you want to destroy.
4. On the Destroy Bond Interface <interface number> page, select the member interface to which you want to move the bond interface settings.  
Only the member interface selected to retain the bond interface settings remains active, and all other member interfaces are disabled.
5. Click **Destroy**.

## Notifications

The ExtraHop system can send notifications about configured alerts through email, SNMP traps, and syslog exports to remote servers. If an email notification group is specified, then emails are sent to the groups assigned to the alert.

### Configure email settings for notifications

You must configure an email server and sender before the ExtraHop system can send alert notifications or scheduled reports.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **Notifications**.
3. Click **Email Server and Sender**.
4. In the SMTP Server field, type the IP address or hostname for the outgoing SMTP mail server.  
The SMTP server is the fully qualified domain name (FQDN) or IP address of an outgoing mail server that is accessible from the ExtraHop system. If the DNS server is set, then the SMTP server can be a FQDN, otherwise you must type an IP address.
5. In the SMTP Port field, type the port number for SMTP communication.  
Port 25 is the default value for SMTP, and port 465 is the default value for SSL/TLS encrypted SMTP.
6. From the Encryption drop-down list, select one of the following encryption methods:

#### None

SMTP communication is not encrypted.

#### SSL/TLS

SMTP communication is encrypted through the Secure Socket Layer/Transport Layer Security protocol.

#### STARTTLS

SMTP communication is encrypted through STARTTLS.

7. In the Alert Sender Address field, type the email address for the notification sender.



**Note:** The displayed sender address might be changed by the SMTP server. When sending through a Google SMTP server, for example, the sender email is changed to the username supplied for authentication, instead of the originally entered sender address.

8. (Optional) Select the Validate SSL Certificates checkbox to enable certificate validation.  
If you select this option, the certificate on the remote endpoint is validated against the root certificate chains specified by the trusted certificates manager. Note that the host name specified in the certificate presented by the SMTP server must match the hostname specified in your SMTP configuration or validation will fail. In addition, you must configure which certificates you want to trust on the Trusted Certificates page. For more information, see [Add a trusted certificate to your ExtraHop system](#).
9. In the Report Sender Address field, type the email address responsible for sending the message.  
This field is only applicable when sending scheduled reports from an ExtraHop console or RevealX 360.
10. Select the **Enable SMTP authentication** checkbox.

11. In the Username and Password fields, type the SMTP server setup credentials.
12. (Optional) Click **Test Settings**, type your email address, and then click **Send**.  
You should receive an email message with the subject title `ExtraHop Test Email`.
13. Click **Save**.

#### Next steps

After you confirm that your new settings are working as expected, preserve your configuration changes through system restart and shutdown events by saving the running configuration file.

## Add a new notification email address on an Explore or Trace appliance

You can send system storage alerts to individual recipients. Alerts are sent under the following conditions:

- A physical disk is in a degraded state.
  - A physical disk has an increasing error count.
  - (Explore appliance only) A virtual disk is in a degraded state.
  - (Explore appliance only) A registered Explore node is missing from the cluster. The node might have failed, or it is powered off.
1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
  2. In the Network Settings section, click **Notifications**.
  3. Under Notifications, click **Email Addresses**.
  4. In the **Email address** text box, type the recipient email address.
  5. Click **Save**.

## Configure settings to send notifications to an SNMP manager

The state of the network can be monitored through the Simple Network Management Protocol (SNMP). SNMP collects information by polling devices on the network. SNMP enabled devices can also send alerts to SNMP management stations. SNMP communities define the group where devices and management stations running SNMP belong, which specifies where information is sent. The community name identifies the group.



**Note:** Most organizations have an established system for collecting and displaying SNMP traps in a central location that can be monitored by their operations teams. For example, SNMP traps are sent to an SNMP manager, and the SNMP management console displays them.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **Notifications**.
3. Under Notifications, click **SNMP**.
4. On the SNMP Settings page, in the **SNMP Monitor** field, type the hostname for the SNMP trap receiver.  
Separate multiple hostnames with commas.
5. In the **SNMP Community** field, type the SNMP community name.
6. In the **SNMP Port** field, type the SNMP port number for your network that is used by the SNMP agent to respond back to the source port on the SNMP manager.  
The default response port is 162.
7. (Optional) Click **Test Settings** to verify that your SNMP settings are correct.  
If the settings are correct, you should see an entry in the SNMP log file on the SNMP server similar to this example, where 192.0.2.0 is the IP address of your ExtraHop system and 192.0.2.255 is the IP address of the SNMP server:



A response similar to this example displays:

```
Connection from UDP: [192.0.2.0]:42164->[ 192.0.2.255]:162
```

8. Click **Save**.

### Download the ExtraHop SNMP MIB

SNMP does not provide a database of information that an SNMP-monitored network reports. SNMP information is defined by third-party management information bases (MIBs) that describe the structure of the collected data.

You can download the ExtraHop MIB file from the system's Administration settings.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. Go to the Network Settings section and click **Notifications**.
3. Under Notifications, click **SNMP**.
4. Under SNMP MIB, click the **Download ExtraHop SNMP MIB**.  
The file is typically saved to the default download location for your browser.

### Send system notifications to a remote syslog server

The syslog export option enables you to send alerts from an ExtraHop system to any remote system that receives syslog input for long-term archiving and correlation with other sources.

Only one remote syslog server can be configured for each ExtraHop system.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **Notifications**.
3. In the Destination field, type the IP address of the remote syslog server.
4. From the **Protocol** drop-down list, select **TCP** or **UDP**.

This option specifies the protocol over which the information will be sent to your remote syslog server.

5. In the Port field, type the port number for your remote syslog server.  
The default value is 514.

6. Click **Test Settings** to verify that your syslog settings are correct.

If the settings are correct, you should see an entry in the syslog log file on the syslog server similar to the following:

```
Jul 27 21:54:56 extrahop name="ExtraHop Test" event_id=1
```

7. Click **Save**.
8. (Optional) Modify the format of syslog messages.

By default, syslog messages are not compliant with RFC 3164 or RFC 5424. However, you can format syslog messages to be compliant by modifying the running configuration file.

- a) Click **Admin**.
- b) Click **Running Config (Unsaved Changes)**.
- c) Click **Edit Config**.
- d) Add an entry under `syslog_notification`, where the key is `rfc_compliant_format` and the value is either `rfc5424` or `rfc3164`.

The `syslog_notification` section should look similar to the following code:

```
"syslog_notification": {
  "syslog_destination": "192.168.0.0",
  "syslog_ipproto": "udp",
  "syslog_port": 514,
```



```
    "rfc_compliant_format": "rfc5424"
  }
```

- e) Click **Update**.
  - f) Click **Done**.
9. (Optional) Modify the timezone referenced in syslog timestamps.
- By default, syslog timestamps reference UTC time. However, you can modify timestamps to reference the ExtraHop system time by modifying the running configuration file.
- a) Click **Admin**.
  - b) Click **Running Config (Unsaved Changes)**.
  - c) Click **Edit Config**.
  - d) Add an entry under `syslog_notification` where the key is `syslog_use_localtime` and the value is `true`.

The `syslog_notification` section should look similar to the following code:

```
"syslog_notification": {
  "syslog_destination": "192.168.0.0",
  "syslog_ipproto": "udp",
  "syslog_port": 514,
  "syslog_use_localtime": true
}
```

- e) Click **Update**.
- f) Click **Done**.


#### Next steps

After you confirm that your new settings are working as expected, preserve your configuration changes through system restart and shutdown events by saving the running configuration file.

## SSL Certificate


SSL certificates provide secure authentication to the ExtraHop system.

You can designate a self-signed certificate for authentication instead of a certificate signed by a Certificate Authority. However, be aware that a self-signed certificate generates an error in the client browser, which reports that the signing certificate authority is unknown. The browser provides a set of confirmation pages to trust the certificate, even though the certificate is self-signed. Self-signed certificates can also degrade performance by preventing caching in some browsers. We recommend that you create a certificate-signing request from your ExtraHop system and upload the signed certificate instead.

 **Important:** When replacing an SSL certificate, the web server service is restarted. Tunneled connections from ExtraHop sensors to ExtraHop consoles are lost but then re-established automatically.

### Upload an SSL certificate

You must upload a `.pem` file that includes both a private key and either a self-signed certificate or a certificate-authority certificate.

 **Note:** The `.pem` file must not be password protected.

 **Note:** You can also [automate this task through the REST API](#).

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **SSL Certificate**.
3. Click **Manage certificates** to expand the section.

4. Click **Choose File** and navigate to the certificate that you want to upload.
5. Click **Open**.
6. Click **Upload**.

## Generate a self-signed certificate

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **SSL Certificate**.
3. Click **Manage certificates** to expand the section.
4. Click **Build SSL self-signed certificate based on hostname**.
5. On the Generate Certificate page, click **OK** to generate the SSL self-signed certificate.



**Note:** The default hostname is `extrahop`.

## Create a certificate signing request from your ExtraHop system

A certificate signing request (CSR) is a block of encoded text that is given to your Certificate Authority (CA) when you apply for an SSL certificate. The CSR is generated on the ExtraHop system where the SSL certificate will be installed and contains information that will be included in the certificate such as the common name (domain name), organization, locality, and country. The CSR also contains the public key that will be included in the certificate. The CSR is created with the private key from the ExtraHop system, making a key pair.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **SSL Certificate**.
3. Click **Manage certificates** and then click **Export a Certificate Signing Request (CSR)**.
4. In the Subject Alternative Names section, type the DNS name of the ExtraHop system.  
You can add multiple DNS names and IP addresses to be protected by a single SSL Certificate.
5. In the Subject section, complete the following fields.  
Only the **Common Name** field is required.

Field	Description	Examples
Common Name	The fully qualified domain name (FQDN) of the ExtraHop system. The FQDN must match one of the Subject Alternative Names.	*.example.com discover.example.com
E-mail Address	The email address of the primary contact for your organization.	webmaster@example.com
Organizational Unit	The division of your organization handling the certificate.	IT Department
Organization	The legal name of your organization. This entry should not be abbreviated and should include suffixes such as Inc, Corp, or LLC.	Example, Inc.
Locality/City	The city where your organization is located.	Seattle

Field	Description	Examples
State/Province	The state or province where your organization is located. This entry should not be abbreviated.	Washington
Country Code	The two-letter ISO code for the country where your organization is located.	US

6. Click **Export**.

The CSR file is automatically downloaded to your computer.

#### Next steps

Send the CSR file to your certificate authority (CA) to have the CSR signed. When you receive the SSL certificate from the CA, return to the SSL Certificate page in the Administration settings and upload the certificate to the ExtraHop system.



**Tip:** If your organization requires that the CSR contains a new public key, **generate a self-signed certificate** to create new key pairs before creating the CSR.

## Trusted Certificates

Trusted certificates enable you to validate SMTP, LDAP, HTTPS ODS and MongoDB ODS targets, as well as Splunk recordstore connections from your ExtraHop system.

### Add a trusted certificate to your ExtraHop system

Your ExtraHop system only trusts peers who present a Transport Layer Security (TLS) certificate that is signed by one of the built-in system certificates and any certificates that you upload. SMTP, LDAP, HTTPS ODS and MongoDB ODS targets, as well as Splunk recordstore connections can be validated through these certificates.

#### Before you begin

You must log in as a user with setup or system and access administration privileges to add or remove trusted certificates.

When uploading a custom trusted certificate, a valid trust path must exist from the uploaded certificate to a trusted self-signed root in order for the certificate to be fully trusted. Either upload the entire certificate chain for each trusted certificate or (preferably) ensure that each certificate in the chain has been uploaded to the trusted certificates system.



**Important:** To trust the built-in system certificates and any uploaded certificates, you must also enable SSL/TLS or STARTTLS encryption and certificate validation when configuring the settings for the external server.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Network Settings section, click **Trusted Certificates**.
3. (Optional) If you want to trust the built-in certificates included in the ExtraHop system, select **Trust System Certificates**, and then click **Save**.
4. To add your own certificate, click **Add Certificate** and then in the Certificate field, paste the contents of the PEM-encoded certificate chain.
5. In the Name field, type a name.
6. Click **Add**.

## Access Settings

In the Access Settings section, you can change user passwords, enable the support account, manage local users and user groups, configure remote authentication, and manage API access.

### Passwords


Users with privileges to the Administration page can change the password for local user accounts.

- Select any user and change their password
  - You can only change passwords for local users. You cannot change passwords for users authenticated through LDAP or other remote authentication servers.

For more information about privileges for specific Administration page users and groups, see the [Users](#) section.

### Change the default password for the setup user

It is recommended that you change the default password for the setup user on the ExtraHop system after you log in for the first time. To remind administrators to make this change, there is a blue **Change Password** button at the top of the page while the setup user is accessing the Administration settings. After the setup user password is changed, the button at the top of the page no longer appears.

 **Note:** The password must be a minimum of 5 characters.


1. In the Administration settings, click the blue **Change default password** button. The Password page displays without the drop-down list for accounts. The password will change for the setup user only.
2. In the Old password field, type the default password.
3. In the New password field, type the new password.
4. In the Confirm password field, retype the new password.
5. Click **Save**.

### Support Access

Support accounts provide access for the ExtraHop Support team to help customers troubleshoot issues with the ExtraHop system.

These settings should be enabled only if the ExtraHop system administrator requests hands-on assistance from the ExtraHop Support team.

### Generate SSH key

Generate an SSH key to enable ExtraHop Support to connect to your ExtraHop system when [remote access](#)  is configured through [ExtraHop Cloud Services](#).

1. In the Access Settings section, click **Support Access**.
2. Click **Generate SSH Key**.
3. Copy the encrypted key from the text box and email the key to your ExtraHop representative.
4. Click **Done**.

## Regenerate or revoke the SSH key

To prevent SSH access to the ExtraHop system with an existing SSH key, you can revoke the current SSH key. A new SSH key can also be regenerated if needed.

1. In the Access Settings section, click **Support Access**.
2. Click **Generate SSH Key**.
3. Choose one of the following options:
  - Click **Regenerate SSH Key** and then click **Regenerate**.  
Copy the encrypted key from the text box and email the key to your ExtraHop representative and then click **Done**.
  - Click **Revoke SSH Key** to prevent SSH access to the system with the current key.

## Users

The Users page enables you to control local access to the ExtraHop appliance.

### Add a local user account


By adding a local user account, you can provide users with direct access to your ExtraHop system and restrict their privileges as needed by their role in your organization.

To learn about default system user accounts, see [Local users](#).


1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Access Settings section, click **Users**.
3. Click **Add User**.
4. In the Personal Information section, in the Login ID field, type the username that users will log in to the sensor with, which cannot contain any spaces.

For example, `adalovelace`.

5. In the Full Name field, type a display name for the user.  
The name can contain spaces. For example, `Ada Lovelace`.
6. In the Password field, type the password for this account.

 **Note:** On sensors and consoles, the password must meet the criteria specified by the [global password policy](#). On ExtraHop recordstores and packetstores, passwords must be 5 characters or more.

7. In the Confirm Password field, re-type the password from the Password field.
8. In the Authentication Type section, select **Local**.
9. In the User Type section, select the type of privileges for the user.
  - System and access administration privileges enables full read and write access to the ExtraHop system, including Administration settings.
  - Limited privileges enable you to select from a subset of privileges and options.

 **Note:** For more information, see the [User privileges](#) section.

10. Click **Save**.



- Tip:**
- To modify settings for a user, click the username from the list to bring up the Edit user page.
  - To delete a user account, click the red **X** icon. If you delete a user from a remote authentication server, such as LDAP, you must also delete the entry for that user on the ExtraHop system.

## Users and user groups

Users can access the ExtraHop system in three ways: through a set of pre-configured user accounts, through local user accounts configured on the appliance, or through remote user accounts configured on existing authentication servers, such as LDAP, SAML, Radius, and TACACS+.

 **Video** the related trainings:

- [User Administration](#)
- [User Groups](#)

### Local users

This topic is about default and local accounts. See [Remote Authentication](#) to learn how to configure remote accounts.

The following accounts are configured by default on ExtraHop systems but do not appear in the list of names on the Users page. These accounts cannot be deleted and you must change the default password upon initial login.

#### setup

This account provides full system read and write privileges to the browser-based user interface and to the ExtraHop command-line interface (CLI). On physical sensors, the default password for this account is the service tag number on the front of the appliance. On virtual sensors, the default password is `default`.

#### shell

The `shell` account, by default, has access to non-administrative shell commands in the ExtraHop CLI. On physical sensors, the default password for this account is the service tag number on the front of the appliance. On virtual sensors, the default password is `default`.



**Note:** The default ExtraHop password for either account when deployed in Amazon Web Services (AWS) and Google Cloud Platform (GCP) is the instance ID of the virtual machine.

### Next steps

- [Add a local user account](#)

### Remote Authentication

The ExtraHop system supports remote authentication for user access. Remote authentication enables organizations that have authentication systems such as LDAP (OpenLDAP or Active Directory, for example) to enable all or a subset of their users to log in to the system with their existing credentials.

Centralized authentication provides the following benefits:

- User password synchronization.
- Automatic creation of ExtraHop accounts for users without administrator intervention.
- Management of ExtraHop privileges based on user groups.
- Administrators can grant access to all known users or restrict access by applying LDAP filters.

### Next steps

- [Configure remote authentication through LDAP](#)
- [Configure remote authentication through SAML](#)
- [Configure remote authentication through TACACS+](#)
- [Configure remote authentication through RADIUS](#)

### Remote users

If your ExtraHop system is configured for SAML or LDAP remote authentication, you can create an account for those remote users. Preconfiguring accounts on the ExtraHop system for remote users enables you to share system customizations with those users before they log in.

If you choose to auto-provision users when you configure SAML authentication, then the user is automatically added to the list of local users when they log in for the first time. However, you can create a remote SAML user account on the ExtraHop system when you want to provision a remote user before that user has logged in to the system. Privileges are assigned to the user by the provider. After the user is created, you can add them to local user groups.

### Next steps

- [Add an account for a remote user](#)

### User groups

User groups enable you to manage access to shared content by group instead of by individual user. Customized objects such as activity maps can be shared with a user group, and any user who is added to the group automatically has access. You can create a local user group—which can include remote and local users. Alternatively, if your ExtraHop system is configured for remote authentication through LDAP, you can configure settings to import your LDAP user groups.

- Click **Create User Group** to create a local group. The user group appears in the list. Then, select the checkbox next to the user group name and select users from the **Filter users...** drop-down list. Click **Add Users to Group**.
- (LDAP only) Click **Refresh All User Groups** or select multiple LDAP user groups and click **Refresh Users in Groups**.
- Click **Reset User Group** to remove all shared content from a selected user group. If the group no longer exists on the remote LDAP server, the group is removed from the user group list.
- Click **Enable User Group** or **Disable User Group** to control whether any group member can access shared content for the selected user group.
- Click **Delete User Group** to remove the selected user group from the system.
- View the following properties for listed user groups:

#### Group Name

Displays the name of the group. To view the members in the group, click the group name.

#### Type

Displays Local or Remote as the type of user group.

#### Members

Displays the number of users in the group.

#### Shared Content

Displays the number of user-created objects that are shared with the group.

#### Status

Displays whether the group is enabled or disabled on the system. When the status is `Disabled`, the user group is considered empty when performing membership checks; however, the user group can still be specified when sharing content.

#### Members Refreshed (LDAP only)

Displays the amount of time elapsed since the group membership was refreshed. User groups are refreshed under the following conditions:

- Once per hour, by default. The refresh interval setting can be modified on the **Remote Authentication > LDAP Settings** page.
- An administrator refreshes a group by clicking **Refresh All User Groups** or **Refresh Users in Group**, or programmatically through the REST API. You can refresh a group from the User Group page or from within the Member List page.
- A remote user logs in to the ExtraHop system for the first time.
- A user attempts to load a shared dashboard that they do not have access to.

### User privileges

Administrators determine the module access level for users in the ExtraHop system.

For information about user privileges for the REST API, see the [REST API Guide](#).

For information about remote user privileges, see the configuration guides for [LDAP](#), [RADIUS](#), [SAML](#), and [TACACS+](#).

### Privilege Levels

Set the privilege level for your user to determine which areas of the ExtraHop system they can access.

### Module Access privileges

These privileges determine the features that users can access in the ExtraHop system. Administrators can grant users role-based access to one or all of the Network Detection and Response (NDR), Network Performance and Monitoring (NPM), and Packet Forensics modules. A module license is required to access module features.

#### NDR Module Access

Allows the user to access security features such as attack detections, investigations, and threat briefings.

#### NPM Module Access

Allows the user to access performance features such as operations detections and the ability to create custom dashboards.

#### Packet and Session Key Access

Allows the user to view and download packets and session keys, packets only, or packet slices only. Also allows the user to extract files associated with packets.

### System Access privileges

These privileges determine the level of functionality users have within the modules where they have been granted access.

For RevealX Enterprise, users with system access and administration privileges can access all features, packets, and session keys for their licensed modules.

For RevealX 360, system access and administration privileges, access to licensed modules, packets, and session keys must be assigned separately. RevealX 360 also offers an additional System Administration account that grants full system privileges except for the ability to manage users and API access.

The following table contains ExtraHop features and their required privileges. If no module requirement is noted, the feature is available in both the NDR and NDM modules.

	System and Access Administration	System Administration (RevealX 360 only)	Full Write	Limited Write	Personal Write	Full Read-Only	Restricted Read-Only
Activity Maps							
Create, view, and load shared activity maps	Y	Y	Y	Y	Y	Y	N
Save activity maps	Y	Y	Y	Y	Y	N	N



	System and Access Administration	System Administration (RevealX 360 only)	Full Write	Limited Write	Personal Write	Full Read-Only	Restricted Read-Only
Share activity maps	Y	Y	Y	Y	N	N	N
Alerts	NPM module license and access required.						
View alerts	Y	Y	Y	Y	Y	Y	Y
Create and modify alerts	Y	Y	Y	N	N	N	N
Analysis Priorities							
View Analysis Priorities page	Y	Y	Y	Y	Y	Y	N
Add and modify analysis levels for groups	Y	Y	Y	N	N	N	N
Add devices to a watchlist	Y	Y	Y	N	N	N	N
Transfer priorities management	Y	Y	Y	N	N	N	N
Bundles							
Create a bundle	Y	Y	Y	N	N	N	N
Upload and apply a bundle	Y	Y	Y	N	N	N	N
Download a bundle	Y	Y	Y	Y	Y	N	N
View list of bundles	Y	Y	Y	Y	Y	Y	N
Dashboards	NPM module license and access required to create and modify dashboards.						
View and organize dashboards	Y	Y	Y	Y	Y	Y	Y
Create and modify dashboards	Y	Y	Y	Y	Y	N	N

	System and Access Administrati	System Administrati (RevealX 360 only)	Full Write	Limited Write	Personal Write	Full Read-Only	Restricted Read-Only
Share dashboards	Y	Y	Y	Y	N	N	N
Detections	NDR module license and access required to view and tune security detections and create investigations. NPM module license and access required to view and tune performance detections.						
View detections	Y	Y	Y	Y	Y	Y	Y
Acknowledge Detections	Y	Y	Y	Y	Y	N	N
Modify detection status and notes	Y	Y	Y	Y	N	N	N
Create and modify investigations	Y	Y	Y	Y	N	N	N
Create and modify tuning rules	Y	Y	Y	N	N	N	N
Device Groups	Administrators can configure the <a href="#">Device Group Edit Control global policy</a> to specify whether users with limited write privileges can create and edit device groups.						
Create and modify device groups	Y	Y	Y	Y (If the global privilege policy is enabled)	N	N	N
Metrics							
View metrics	Y	Y	Y	Y	Y	Y	N
Notification Rules	NDR module license and access required to create and modify notifications for security detections and threat briefings. NPM module license and access required to create and modify notifications for performance detections.						
Create and modify detection notification rules	Y	Y	Y	N	N	N	N
Create and modify threat briefing	Y	Y	Y	N	N	N	N

	System and Access Administration	System Administration (RevealX 360 only)	Full Write	Limited Write	Personal Write	Full Read-Only	Restricted Read-Only
notification rules							
Create and modify system notification rules (RevealX only)	Y	Y	N	N	N	N	N
Records	Recordstore required.						
View record queries	Y	Y	Y	Y	Y	Y	N
View record formats	Y	Y	Y	Y	Y	Y	N
Create, modify, and save record queries	Y	Y	Y	N	N	N	N
Create, modify, and save record formats	Y	Y	Y	N	N	N	N
Scheduled Reports	Console required.						
Create, view, and manage scheduled reports	Y	Y	Y	Y	N	N	N
Threat Intelligence	NDR module license and access required.						
Configure file hashing filters	Y	Y	N	N	N	N	N
Manage threat collections	Y	Y	N	N	N	N	N
Manage TAXII feeds	Y	Y	N	N	N	N	N
View threat intelligence information	Y	Y	Y	Y	Y	Y	N

	System and Access Administration	System Administration (RevealX 360 only)	Full Write	Limited Write	Personal Write	Full Read-Only	Restricted Read-Only
<b>Triggers</b>							
Create and modify triggers	Y	Y	Y	N	N	N	N
<b>Administrative Privileges</b>							
Access the ExtraHop Administration settings	Y	Y	N	N	N	N	N
Connect to other appliances	Y	Y	N	N	N	N	N
Manage other appliances (Console)	Y	Y	N	N	N	N	N
Manage users and API access	Y	N	N	N	N	N	N

## Sessions

The ExtraHop system provides controls to view and delete user connections to the web interface. The Sessions list is sorted by expiration date, which corresponds to the date the sessions were established. If a session expires or is deleted, the user must log in again to access the web interface.


## Remote Authentication

The ExtraHop system supports remote authentication for user access. Remote authentication enables organizations that have authentication systems such as LDAP (OpenLDAP or Active Directory, for example) to enable all or a subset of their users to log in to the system with their existing credentials.

Centralized authentication provides the following benefits:

- User password synchronization.
- Automatic creation of ExtraHop accounts for users without administrator intervention.
- Management of ExtraHop privileges based on user groups.
- Administrators can grant access to all known users or restrict access by applying LDAP filters.

### Next steps

- [Configure remote authentication through LDAP](#)
- [Configure remote authentication through SAML](#) 
- [Configure remote authentication through TACACS+](#)
- [Configure remote authentication through RADIUS](#)

## Configure remote authentication through LDAP


The ExtraHop system supports the Lightweight Directory Access Protocol (LDAP) for authentication and authorization. Instead of storing user credentials locally, you can configure your ExtraHop system to authenticate users remotely with an existing LDAP server. Note that ExtraHop LDAP authentication only queries for user accounts; it does not query for any other entities that might be in the LDAP directory.

### Before you begin

- This procedure requires familiarity with configuring LDAP.
- Ensure that each user is in a permission-specific group on the LDAP server before beginning this procedure.
- If you want to configure nested LDAP groups, you must modify the Running Configuration file. Contact [ExtraHop Support](#) for help.


When a user attempts to log onto an ExtraHop system, the ExtraHop system tries to authenticate the user in the following ways:

- Attempts to authenticate the user locally.
- Attempts to authenticate the user through the LDAP server if the user does not exist locally and if the ExtraHop system is configured for remote authentication with LDAP.
- Logs the user onto the ExtraHop system if the user exists and the password is validated either locally or through LDAP. The LDAP password is not stored locally on the ExtraHop system. Note that you must enter the username and password in the format that your LDAP server is configured for. The ExtraHop system only forwards the information to the LDAP server.
- If the user does not exist or an incorrect password is entered, an error message appears on the login page.

 **Important:** If you change LDAP authentication at a later time to a different remote authentication method, the users, user groups, and associated customizations that were created through remote authentication are removed. Local users are unaffected.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Access Settings section, click **Remote Authentication**.
3. From the Remote authentication method drop-down list, select **LDAP** and then click **Continue**.
4. On the LDAP Settings page, complete the following server information fields:
  - a) In the Hostname field, type the hostname or IP address of the LDAP server. If you are configuring a hostname, make sure that the DNS entry of the ExtraHop system is properly configured.
  - b) In the Port field, type the port number on which the LDAP server is listening.
  - c) From the **Server Type** drop-down list, select **Posix** or **Active Directory**.
  - d) (Optional) In the Bind DN field, type the bind DN. The bind DN is the user credentials that allow you to authenticate with the LDAP server to perform the user search. The bind DN must have list access to the base DN and any OU, groups, or user account required for LDAP authentication. If this value is not set, then an anonymous bind is performed. Note that anonymous binds are not enabled on all LDAP servers.
  - e) (Optional) In the Bind Password field, type the bind password. The bind password is the password required when authenticating with the LDAP server as the bind DN specified above. If you are configuring an anonymous bind, leave this field blank. In some cases, an unauthenticated bind is possible, where you supply a Bind DN value but no bind password. Consult your LDAP administrator for the proper settings.
  - f) From the **Encryption** drop-down list, select one of the following encryption options.
    - **None:** This options specifies cleartext TCP sockets. All passwords are sent across the network in cleartext in this mode.
    - **LDAPS:** This option specifies LDAP wrapped inside SSL.
    - **StartTLS:** This option specifies TLS LDAP. (SSL is negotiated before any passwords are sent.)


- g) Select **Validate SSL Certificates** to enable certificate validation. If you select this option, the certificate on the remote endpoint is validated against the root certificates as specified by the trusted certificates manager. You must configure which certificates you want to trust on the Trusted Certificates page. For more information, see [Add a trusted certificate to your ExtraHop system](#).
- h) In the Refresh Interval field, type a time value or leave the default setting of 1 hour. The refresh interval ensures that any changes made to user or group access on the LDAP server are updated on the ExtraHop system.
5. Configure the following user settings:
- a) In the Base DN field, type the base distinguished name (DN). The Base DN is the point from where a server will search for users. The base DN must contain all user accounts that will have access to the ExtraHop system. The users can be direct members of the base DN or nested within an OU within the base DN if the **Whole Subtree** option is selected for the Search Scope specified below.
- b) In the Search Filter field, type a search filter. Search filters enable you to define search criteria when searching the LDAP directory for user accounts.


 **Important:** The ExtraHop system automatically adds parentheses to wrap the filter and will not parse this parameter correctly if you add parentheses manually. Add your search filters in this step and in step 5b, similar to the following example:

```
cn=atlas*
| (cn=EH-*) (cn=IT-*)
```

In addition, if your group names include the asterisk (\*) character, the asterisk must be escaped as \2a. For example, if your group has a CN called test\*group, type cn=test\2agroup in the Search Filter field.

- c) From the **Search Scope** drop-down list, select one of the following options. Search scope specifies the scope of the directory search when looking for user entities.
- **Whole subtree:** This option looks recursively under the group DN for matching users.
  - **Single level:** This option looks for users that exist in the base DN only; not any subtrees.
6. (Optional) To import user groups, select the **Import user groups from LDAP server** checkbox and configure the following settings.

 **Note:** Importing LDAP user groups enables you to share dashboards with those groups. The imported groups appear on the User Group page in the Administration settings.

- a) In the Base DN field, type the base DN. The Base DN is the point from where a server will search for user groups. The base DN must contain all user groups that will have access to the ExtraHop system. The user groups can be direct members of the base DN or nested within an OU within the base DN if the **Whole Subtree** option is selected for the Search Scope specified below.
- b) In the Search Filter field type a search filter. Search filters enable you to define search criteria when searching the LDAP directory for user groups.
-  **Important:** For group search filters, the ExtraHop system implicitly filters on the objectclass=group, and so objectclass=group should not be added to this filter.
- c) From the **Search Scope** drop-down list, select one of the following options. Search scope specifies the scope of the directory search when looking for user group entities.
- **Whole subtree:** This option looks recursively under the base DN for matching user groups.
  - **Single level:** This option looks for user groups that exist in the base DN; not any subtrees.

7. Click **Test Settings**.

If the test succeeds, a status message appears near the bottom of the page. If the test fails, click **Show details** to see a list of errors. You must resolve any errors before you continue.

8. Click **Save and Continue**.

#### Next steps

#### Configure user privileges for remote authentication

#### Configure user privileges for remote authentication

You can assign user privileges to individual users on your ExtraHop system or configure and manage privileges through your LDAP server.

When assigning user privileges through LDAP, you must complete at least one of the available user privilege fields. These fields require groups (not organizational units) that are pre-specified on your LDAP server. A user account with access must be a direct member of a specified group. User accounts that are not a member of a group specified above will not have access. Groups that are not present are not authenticated on the ExtraHop system.

The ExtraHop system supports both Active Directory and POSIX group memberships. For Active Directory, `memberOf` is supported. For POSIX, `memberuid`, `posixGroups`, `groupofNames`, and `groupofuniqueNames` are supported.

1. Choose one of the following options from the Privilege assignment options drop-down list:

- **Obtain privileges level from remote server**

This option assigns privileges through your remote authentication server. You must complete at least one of the following distinguished name (DN) fields.

- **System and Access Administration DN:** Create and modify all objects and settings on the ExtraHop system, including Administration settings.
- **Full Write DN:** Create and modify objects on the ExtraHop system, not including Administration settings.
- **Limited Write DN:** Create, modify, and share dashboards.
- **Personal Write DN:** Create personal dashboards and modify dashboards shared with the logged-in user.
- **Full read-only DN:** View objects in the ExtraHop system.
- **Restricted Read-only DN:** View dashboards shared with the logged-in user.
- **Packet Slices Access DN:** View and download the first 64 bytes of packets captured through the ExtraHop Trace appliance.
- **Packet Access DN:** View and download packets captured through the ExtraHop Trace appliance.
- **Packet and Session Keys Access DN:** View and download packets and any associated SSL session keys captured through the ExtraHop Trace appliance.
- **NDR Module Access DN:** View, acknowledge, and hide security detections that appear in the ExtraHop system.
- **NPM Module Access DN:** View, acknowledge, and hide performance detections that appear in the ExtraHop system.

- **Remote users have full write access**

This option grants remote users full write access to the ExtraHop system. In addition, you can grant additional access for packet downloads, SSL session keys, NDR module access, and NPM module access.

- **Remote users have full read-only access**

This option grants remote users read-only access to the ExtraHop system. In addition, you can grant additional access for packet downloads, SSL session keys, NDR module access, and NPM module access.

2. (Optional) Configure packet and session key access. Select one of the following options to allow remote users to download packet captures and SSL session keys.
  - **No access**
  - **Packet slices only**
  - **Packets only**
  - **Packets and session keys**
3. (Optional) Configure NDR and NPM module access.
  - **No access**
  - **Full access**
4. Click **Save and Finish**.
5. Click **Done**.

## Configure remote authentication through RADIUS

The ExtraHop system supports Remote Authentication Dial In User Service (RADIUS) for remote authentication and local authorization only. For remote authentication, the ExtraHop system supports unencrypted RADIUS and plaintext formats.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Access Settings section, click **Remote Authentication**.
3. From the Remote authentication method drop-down list, select **RADIUS** and then click **Continue**.
4. On the Add RADIUS Server page, type the following information:

### Host

The hostname or IP address of the RADIUS server. Make sure that the DNS of the ExtraHop system is properly configured if you specify a hostname.

### Secret

The shared secret between the ExtraHop system and the RADIUS server. Contact your RADIUS administrator to obtain the shared secret.

### Timeout

The amount of time in seconds that the ExtraHop system waits for a response from the RADIUS server before attempting the connection again.

5. Click **Add Server**.
6. (Optional) Add additional servers as needed.
7. Click **Save and Finish**.
8. From the Privilege assignment options drop-down list, choose one of the following options:
  - **Remote users have full write access**

This option grants remote users full write access to the ExtraHop system. In addition, you can grant additional access for packet downloads, SSL session keys, NDR module access, and NPM module access.
  - **Remote users have full read-only access**

This option grants remote users read-only access to the ExtraHop system. In addition, you can grant additional access for packet downloads, SSL session keys, NDR module access, and NPM module access.
9. (Optional) Configure packet and session key access. Select one of the following options to allow remote users to download packet captures and SSL session keys.



- **No access**
  - **Packet slices only**
  - **Packets only**
  - **Packets and session keys**
10. (Optional) Configure NDR and NPM module access.
    - **No access**
    - **Full access**
  11. Click **Save and Finish**.
  12. Click **Done**.

## Configure remote authentication through TACACS+

The ExtraHop system supports Terminal Access Controller Access-Control System Plus (TACACS+) for remote authentication and authorization.

Ensure that each user to be remotely authorized has the [ExtraHop service configured on the TACACS+ server](#) before beginning this procedure.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Access Settings section, click **Remote Authentication**.
3. From the Remote authentication method drop-down list, select **TACACS+**, and then click **Continue**.
4. On the Add TACACS+ Server page, type the following information:
  - **Host:** The hostname or IP address of the TACACS+ server. Make sure that the DNS of the ExtraHop system is properly configured if you are entering a hostname.
  - **Secret:** The shared secret between the ExtraHop system and the TACACS+ server. Contact your TACACS+ administrator to obtain the shared secret.



**Note:** The secret cannot include the number sign (#).

- **Timeout:** The amount of time in seconds that the ExtraHop system waits for a response from the TACACS+ server before attempting to connect again.
5. Click **Add Server**.
  6. (Optional) Add additional servers as needed.
  7. Click **Save and Finish**.
  8. From the Permission assignment options drop-down list, choose one of the following options:
    - **Obtain privileges level from remote server**  
This option allows remote users to obtain privilege levels from the remote server. You must also configure permissions on the TACACS+ server.
    - **Remote users have full write access**  
This option grants remote users full write access to the ExtraHop system. In addition, you can grant additional access for packet downloads, SSL session keys, NDR module access, and NPM module access.
    - **Remote users have full read-only access**  
This option grants remote users read-only access to the ExtraHop system. In addition, you can grant additional access for packet downloads, SSL session keys, NDR module access, and NPM module access.
  9. (Optional) Configure packet and session key access. Select one of the following options to allow remote users to download packet captures and SSL session keys.
    - **No access**


- Packet slices only
  - Packets only
  - Packets and session keys
10. (Optional) Configure NDR and NPM module access.
    - No access
    - Full access
  11. Click **Save and Finish**.
  12. Click **Done**.

### Configure the TACACS+ server

In addition to configuring remote authentication on your ExtraHop system, you must configure your TACACS+ server with two attributes, one for the ExtraHop service and one for the permission level. If you have an ExtraHop packetstore, you can optionally add a third attribute for packet capture and session key logging.

1. Log in to your TACACS+ server and navigate to the shell profile for your ExtraHop configuration.
2. For the first attribute, add `service`.
3. For the first value, add `extrahop`.
4. For the second attribute, add the privilege level, such as `readwrite`.
5. For the second value, add `1`.

For example, the following figure shows the `extrahop` attribute and a privilege level of `readwrite`.

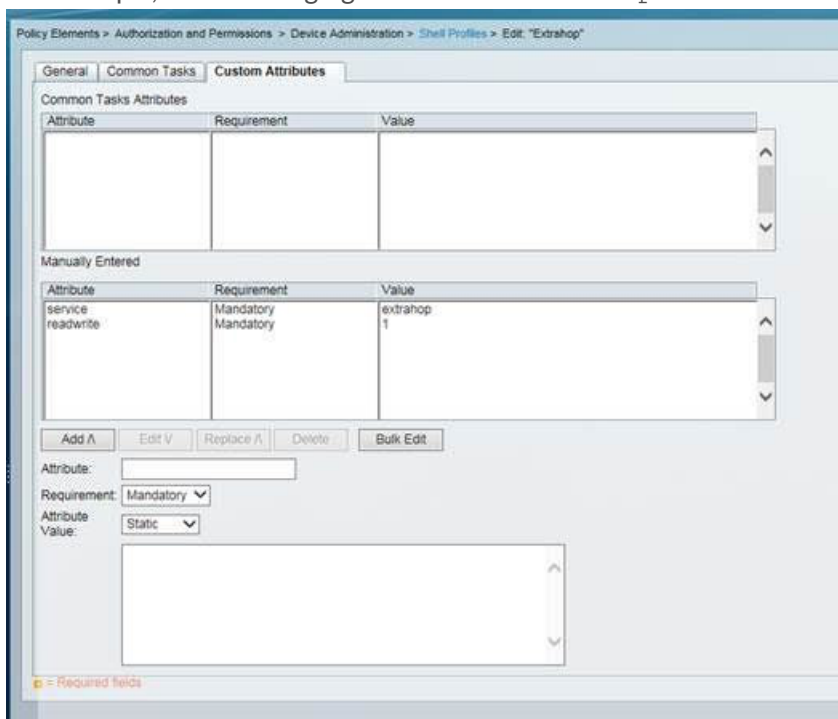

Here is a table of available permission attributes, values, and descriptions:

Attribute	Value	Description
setup	1	Create and modify all objects and settings on the ExtraHop system and manage user access
readwrite	1	Create and modify all objects and settings on the

Attribute	Value	Description
		ExtraHop system, not including Administration settings
limited	1	Create, modify, and share dashboards
readonly	1	View objects in the ExtraHop system
personal	1	Create personal dashboards for themselves and modify any dashboards that have been shared with them
limited_metrics	1	View shared dashboards
ndrfull	1	View, acknowledge, and hide security detections
npmfull	1	View, acknowledge, and hide performance detections
packetsfull	1	View and download packets stored on a connected packetstore.
packetslicesonly	1	View and download packet slices on a connected packetstore.
packetsfullwithkeys	1	View and download packets and associated session keys stored on a connected packetstore.

6. (Optional) Add the following attribute to allow users to view, acknowledge, and hide security detections

Attribute	Value
ndrfull	1

7. (Optional) Add the following attribute to allow users to view, acknowledge, and hide performance detections that appear in the ExtraHop system.

Attribute	Value
npmfull	1

8. (Optional) If you have an ExtraHop packetstore, add an attribute to allow users to download packet captures or packet captures with associated session keys.

Attribute	Value	Description
packetslicesonly	1	Users with any privilege level can view and download the first 64 bytes of packets.
packetsfull	1	Users with any privilege level can view and download

Attribute	Value	Description
		packets stored on a connected packetstore.
packetsfullwithkeys	1	Users with any privilege level can view and download packets and associated session keys stored on a connected packetstore.

## API Access

The API Access page enables you to generate, view, and manage access for the API keys that are required to perform operations through the ExtraHop REST API.

### Manage API key access

Users with system and access administration privileges can configure whether users can generate API keys for the ExtraHop system. You can allow only local users to generate keys, or you can also disable API key generation entirely.

Users must generate an API key before they can perform operations through the ExtraHop REST API. Keys can be viewed only by the user who generated the key or system administrators with unlimited privileges. After a user generates an API key, they must append the key to their request headers.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Access Settings section, click **API Access**.
3. In the Manage API Access section, select one of the following options:
  - **Allow all users to generate an API key:** Local and remote users can generate API keys.
  - **Only local users can generate an API key:** Remote users cannot generate API keys.
  - **No users can generate an API key:** No API keys can be generated by any user.
4. Click **Save Settings**.

### Configure cross-origin resource sharing (CORS)

Cross-origin resource sharing (CORS) allows you to access the ExtraHop REST API across domain-boundaries and from specified web pages without requiring the request to travel through a proxy server.

You can configure one or more allowed origins or you can allow access to the ExtraHop REST API from any origin. Only users with system and access administration privileges can view and edit CORS settings.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Access Settings section, click **API Access**.
3. In the CORS Settings section, specify one of the following access configurations.
  - To add a specific URL, type an origin URL in the text box, and then click the plus (+) icon or press ENTER.  
The URL must include a scheme, such as HTTP or HTTPS, and the exact domain name. You cannot append a path; however, you can provide a port number.
  - To allow access from any URL, select the **Allow API requests from any Origin** checkbox.



**Note:** Allowing REST API access from any origin is less secure than providing a list of explicit origins.

4. Click **Save Settings** and then click **Done**.

## Generate an API key

You must generate an API key before you can perform operations through the ExtraHop REST API. Keys can be viewed only by the user who generated the key or by users with system and access administration privileges. After you generate an API key, add the key to your request headers or the ExtraHop REST API Explorer.

### Before you begin

Make sure the ExtraHop system is [configured to allow API key generation](#).

1. In the Access Settings section, click **API Access**.
2. In the Generate an API Key section, type a description for the new key, and then click **Generate**.
3. Scroll down to the API Keys section and copy the API key that matches your description.

You can paste the key into the REST API Explorer or append the key to a request header.

## Privilege levels

User privilege levels determine which ExtraHop system and administration tasks the user can perform through the ExtraHop REST API.

You can view the privilege levels for users through the `granted_roles` and `effective_roles` properties. The `granted_roles` property shows you which privilege levels are explicitly granted to the user. The `effective_roles` property shows you all privilege levels for a user, including those received outside of the granted role, such as through a user group.

The `granted_roles` and `effective_roles` properties are returned by the following operations:

- GET /users
- GET /users/{username}

The `granted_roles` and `effective_roles` properties support the following privilege levels. Note that the type of tasks for each ExtraHop system vary by the available [resources](#) listed in the REST API Explorer and depend on the modules enabled on the system and user module access privileges.

Privilege level	Actions allowed
"system": "full"	<ul style="list-style-type: none"> <li>• Enable or disable API key generation for the ExtraHop system.</li> <li>• Generate an API key.</li> <li>• View the last four digits and description for any API key on the system.</li> <li>• Delete API keys for any user.</li> <li>• View and edit cross-origin resource sharing.</li> <li>• Perform any administration task available through the REST API.</li> <li>• Perform any ExtraHop system task available through the REST API.</li> </ul>
"write": "full"	<ul style="list-style-type: none"> <li>• Generate your own API key.</li> <li>• View or delete your own API key.</li> <li>• Change your own password, but you cannot perform any other administration tasks through the REST API.</li> <li>• Perform any ExtraHop system task available through the REST API.</li> </ul>
"write": "limited"	<ul style="list-style-type: none"> <li>• Generate an API key.</li> <li>• View or delete their own API key.</li> </ul>

Privilege level	Actions allowed
	<ul style="list-style-type: none"> <li>• Change your own password, but you cannot perform any other administration tasks through the REST API.</li> <li>• Perform all GET operations through the REST API.</li> <li>• Perform metric and record queries.</li> </ul>
"write": "personal"	<ul style="list-style-type: none"> <li>• Generate an API key.</li> <li>• View or delete your own API key.</li> <li>• Change your own password, but you cannot perform any other administration tasks through the REST API.</li> <li>• Perform all GET operations through the REST API.</li> <li>• Perform metric and record queries.</li> </ul>
"metrics": "full"	<ul style="list-style-type: none"> <li>• Generate an API key.</li> <li>• View or delete your own API key.</li> <li>• Change your own password, but you cannot perform any other administration tasks through the REST API.</li> <li>• Perform metric and record queries.</li> </ul>
"metrics": "restricted"	<ul style="list-style-type: none"> <li>• Generate an API key.</li> <li>• View or delete your own API key.</li> <li>• Change your own password, but you cannot perform any other administration tasks through the REST API.</li> </ul>
"ndr": "full"	<ul style="list-style-type: none"> <li>• View security detections</li> <li>• View and create investigations</li> </ul> <p>This is a module access privilege that can be granted to a user in addition to one of the following system access privilege levels:</p> <ul style="list-style-type: none"> <li>• "write": "full"</li> <li>• "write": "limited"</li> <li>• "write": "personal"</li> <li>• "write": null</li> <li>• "metrics": "full"</li> <li>• "metrics": "restricted"</li> </ul>
"ndr": "none"	<ul style="list-style-type: none"> <li>• No access to NDR module content</li> </ul> <p>This is a module access privilege that can be granted to a user in addition to one of the following system access privilege levels:</p> <ul style="list-style-type: none"> <li>• "write": "full"</li> <li>• "write": "limited"</li> <li>• "write": "personal"</li> <li>• "write": null</li> <li>• "metrics": "full"</li> <li>• "metrics": "restricted"</li> </ul>
"npm": "full"	<ul style="list-style-type: none"> <li>• View performance detections</li> <li>• View and create dashboards</li> <li>• View and create alerts</li> </ul>

Privilege level	Actions allowed
	<p>This is a module access privilege that can be granted to a user in addition to one of the following system access privilege levels:</p> <ul style="list-style-type: none"> <li>• "write": "full"</li> <li>• "write": "limited"</li> <li>• "write": "personal"</li> <li>• "write": null</li> <li>• "metrics": "full"</li> <li>• "metrics": "restricted"</li> </ul>
"npm": "none"	<ul style="list-style-type: none"> <li>• No access to NPM module content</li> </ul> <p>This is a module access privilege that can be granted to a user in addition to one of the following system access privilege levels:</p> <ul style="list-style-type: none"> <li>• "write": "full"</li> <li>• "write": "limited"</li> <li>• "write": "personal"</li> <li>• "write": null</li> <li>• "metrics": "full"</li> <li>• "metrics": "restricted"</li> </ul>
"packets": "full"	<ul style="list-style-type: none"> <li>• View and download packets through the <code>GET /packets/search</code> and <code>POST /packets/search</code> operations.</li> </ul> <p>This is an add-on privilege that can be granted to a user with one of the following privilege levels:</p> <ul style="list-style-type: none"> <li>• "write": "full"</li> <li>• "write": "limited"</li> <li>• "write": "personal"</li> <li>• "write": null</li> <li>• "metrics": "full"</li> <li>• "metrics": "restricted"</li> </ul>
"packets": "full_with_keys"	<ul style="list-style-type: none"> <li>• View and download packets and session keys through the <code>GET /packets/search</code> and <code>POST /packets/search</code> operations.</li> </ul> <p>This is an add-on privilege that can be granted to a user with one of the following privilege levels:</p> <ul style="list-style-type: none"> <li>• "write": "full"</li> <li>• "write": "limited"</li> <li>• "write": "personal"</li> <li>• "write": null</li> <li>• "metrics": "full"</li> <li>• "metrics": "restricted"</li> </ul>
"packets": "slices_only"	<ul style="list-style-type: none"> <li>• View and download the first 64 bytes of packets through the <code>GET /packets/search</code> and <code>POST /packets/search</code> operations.</li> </ul> <p>This is an add-on privilege that can be granted to a user with one of the following privilege levels:</p> <ul style="list-style-type: none"> <li>• "write": "full"</li> </ul>

Privilege level	Actions allowed
	<ul style="list-style-type: none"><li data-bbox="639 201 883 228">• "write": "limited"</li><li data-bbox="639 233 902 260">• "write": "personal"</li><li data-bbox="639 264 824 291">• "write": null</li><li data-bbox="639 296 867 323">• "metrics": "full"</li><li data-bbox="639 327 938 354">• "metrics": "restricted"</li></ul>



# Appliance Settings

You can configure the following components of the ExtraHop appliance in the Appliance Settings section.

All appliances have the following components:

## Running Config

Download and modify the running configuration file.

## Services

Enable or disable the Web Shell, management GUI, SNMP service, SSH access, and SSL session key receiver. The SSL Session Key Receiver option appears only on packet sensors.

## Firmware

Upgrade the ExtraHop system firmware.

## System Time

Configure the system time.

## Shutdown or Restart

Halt and restart system services.

## License

Update the license to enable add-on modules.

## Disks

Provides information about the disks in the appliance.

The following components only appear on the specified appliances:

## Console Nickname

Assign a nickname to an ExtraHop console. This setting is available only on the console.

## Reset Packetstore

Delete all packets stored on ExtraHop packetstores. The Reset Packetstore page appears only on packetstores.

## Running Config

The running configuration file specifies the default system configuration. When you modify system settings, you must save the running configuration file to preserve those modifications after a system restart.




**Note:** Making configuration changes to the code from the Edit page is not recommended. You can make most system modifications through other pages in the Administration settings.

## Save system settings to the running configuration file

When you modify any of the system configuration settings on an ExtraHop system, you must confirm the updates by saving the running configuration file. If you do not save the settings, the changes are lost when your ExtraHop system restarts.

To remind you that the running configuration has changed, (Unsaved changes) appears next to the Running Config link on the main Administration settings page, as well as a **View and Save Changes** button on all Administration settings pages.


1. Click **View and Save Changes**.

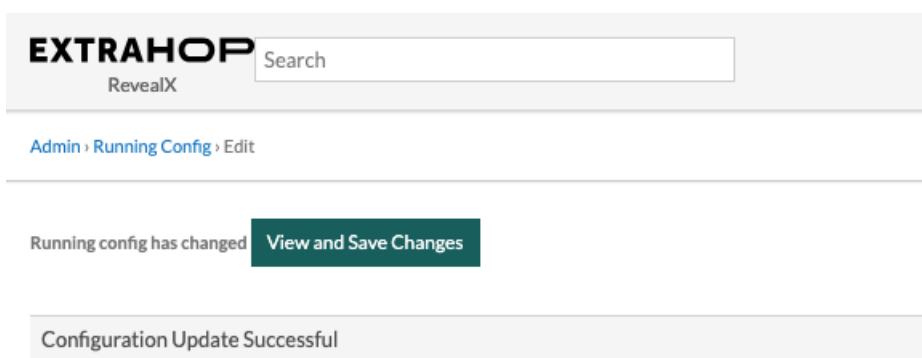

2. Review the comparison between the old running configuration and the current (unsaved) running configuration, and then select from the following options:
  - If the changes are correct, click **Save**.
  - If the changes are not correct, click **Cancel** and then revert the changes by clicking **Revert config**.

### Edit the running configuration file

The ExtraHop Administration settings provide an interface to view and modify the code that specifies the default system configuration. In addition to making changes to the running configuration file through the Administration settings, you can also make changes on the Running Config page.

 **Important:** Making configuration changes to the code from the Edit page is not recommended. You can make most system modifications through other Administration settings.

### Download the running configuration as a text file

You can download the running configuration file to your workstation. You can open this text file and make changes to it locally, before copying those changes into the Running Config window.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Appliance Settings section, click **Running Config**.
3. Click **Download config as a file**.

The current running configuration file is downloaded as a text file to your default download location.

### Disable ICMPv6 Destination Unreachable messages

You can prevent the ExtraHop system from generating ICMPv6 Destination Unreachable messages. You might want to disable ICMPv6 Destination Unreachable messages for security reasons per RFC 4443.

To disable ICMPv6 Destination Unreachable messages, you must edit the Running Configuration. However, we recommend that you do not manually edit the Running Configuration file without direction from ExtraHop Support. Manually editing the running configuration file incorrectly might cause the system to become unavailable or stop collecting data. You can contact [ExtraHop Support](#).

### Disable specific ICMPv6 Echo Reply messages

You can prevent the ExtraHop system from generating Echo Reply messages in response to ICMPv6 Echo Request messages that are sent to an IPv6 multicast or anycast address. You might want to disable these messages to reduce unnecessary network traffic.


To disable specific ICMPv6 Echo Reply messages, you must edit the running configuration file. However, we recommend that you do not manually edit the running configuration file without direction from ExtraHop Support. Manually editing this file incorrectly might cause the system to become unavailable or stop collecting data. You can contact [ExtraHop Support](#).

## Services

These services run in the background and perform functions that do not require user input. These services can be started and stopped through the Administration settings.

### Enable or disable the Management GUI

The Management GUI provides browser-based access to the ExtraHop system. By default, this service is enabled so that ExtraHop users can access the ExtraHop system through a web browser. If this service is disabled, the Apache Web Server session is terminated and all browser-based access is disabled.

 **Warning:** Do not disable this service unless you are an experienced ExtraHop administrator and you are familiar with the ExtraHop CLI.


### Enable or disable the SNMP Service

Enable the SNMP service on the ExtraHop system when you want your network device monitoring software to collect information about the ExtraHop system. This service is disabled by default.

- Enable the SNMP service from the Services page by selecting the Disabled checkbox and then clicking **Save**. After the page refreshes, the Enabled checkbox appears.
- [Configure the SNMP service](#) and download the ExtraHop MIB file


### Enable or disable SSH Access

SSH access is enabled by default to enable users to securely log in to the ExtraHop command-line interface (CLI).

 **Note:** The SSH Service and the Management GUI Service cannot be disabled at the same time. At least one of these services must be enabled to provide access to the system.

### Enable or disable the SSL Session Key Receiver (Sensor only)

You must enable the session key receiver service through the Administration settings before the ExtraHop system can receive and decrypt session keys from the session key forwarder. By default, this service is disabled.

 **Note:** If you do not see this checkbox and have purchased the SSL Decryption license, contact [ExtraHop Support](#) to update your license.

## SNMP Service

Configure the SNMP service on your ExtraHop system so that you can configure your network device monitoring software to collect information about your ExtraHop system through the Simple Network Management Protocol (SNMP).

For example, you can configure your monitoring software to determine how much free space is available on an ExtraHop system and send an alert if the system is over 95% full. Import the ExtraHop SNMP MIB file into your monitoring software to monitor all ExtraHop-specific SNMP objects. You can configure settings for SNMPv1/SNMPv2 and SNMPv3.

## Firmware


The Administration settings provide an interface to upload and delete the firmware on ExtraHop appliances. The firmware file must be accessible from the computer where you will perform the upgrade.


### Before you begin

Be sure to read the [release notes](#) for the firmware version that you want to install. Release notes contain upgrade guidance as well as known issues that might affect critical workflows in your organization.

## Upgrade the firmware on your ExtraHop system




The following procedure shows you how to upgrade your ExtraHop system to the latest firmware release. While the firmware upgrade process is similar across all ExtraHop appliances, some appliances have additional considerations or steps that you must address before you install the firmware in your environment. If you need assistance with your upgrade, contact ExtraHop Support.


 **Video:** Watch the related training: [Update Firmware](#) 

 **Important:** When settings migration fails during firmware upgrade, the previously installed firmware version and ExtraHop system settings are restored.

### Pre-upgrade checklist

Here are some important considerations and requirements about upgrading ExtraHop appliances.

- A system notice appears on consoles and sensors connected to ExtraHop Cloud Services when a new firmware version is available.
- Verify that your RevealX 360 system has been upgraded to version 9.7 before upgrading your self-managed sensors.
- If you are upgrading from firmware version 8.7 or earlier, contact ExtraHop Support for additional upgrade guidance.
- If you are upgrading a virtual ExtraHop sensor deployed on a [VMware ESXi/ESX](#) , [Microsoft Hyper-V](#) , or [Linux KVM](#)  platform from firmware version 9.6 or earlier, the VM must support Streaming SIMD Extensions 4.2 (SSE4.2) and POPCNT instruction; otherwise, the upgrade will fail.
- If you have multiple types of ExtraHop appliances, you must upgrade them in the following order:
  1. Console
  2. Sensors (EDA and Ultra)
  3. Recordstores
  4. Packetstores

 **Note:** Your browser might time out after 5 minutes of inactivity. Refresh the browser page if the update appears incomplete.


If the browser session times out before the ExtraHop system is able to complete the update process, you can try the following connectivity tests to confirm the status up the upgrade process:


- Ping the appliance from the command line of another appliance or client workstation.
- From the Administration settings on a console, view the appliance status on the Manage Connected Appliances page.
- Connect to the appliance through the iDRAC interface.

### Console upgrades

- For large console deployments (managing 50,000 devices or more), reserve a minimum of one hour to perform the upgrade.
- The console firmware version must be greater than or equal to the firmware version of all connected appliances. To ensure feature compatibility, all connected appliances should be running firmware version 8.7 or later.

### Recordstore upgrades

- Do not upgrade recordstores to a firmware version that is newer than the version installed on connected consoles and sensors.
- After upgrading the console and sensors, [disable record ingest on the recordstore](#)  before upgrading the recordstore.
- You must upgrade all recordstore nodes in a recordstore cluster. The cluster will not function correctly if nodes are on dissimilar firmware versions.

 **Important:** The messages `Could not determine ingest status` on some nodes and `Error` appear on the Cluster Data Management page in the Administration settings of the upgraded nodes until all nodes in the cluster are upgraded. These errors are expected and can be ignored.

- You must enable record ingest and shard reallocation from the Cluster Data Management page after all nodes in the recordstore cluster are upgraded.

### Packetstore upgrades

- Do not upgrade packetstores to a firmware version that is newer than the version installed on connected consoles and sensors.

### Upgrade the firmware on a console and sensor

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Appliance Settings section, click **Firmware**.
3. From the **Available Firmware** drop-down list, select the version of firmware that you want to install. The recommended version is selected by default.



**Note:** For sensors, the list includes only firmware versions that are compatible with the version running on the connected console.

4. Click **Download and Install**.

After the firmware upgrade installs successfully, the ExtraHop appliance restarts.

### Upgrade the firmware on recordstores

1. Download the firmware for the appliance from the [ExtraHop Customer Portal](#) to your computer.
2. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
3. Click **Cluster Data Management**.
4. Click **Disable Record Ingest**.
5. Click **Admin** to return to the main Administration page.
6. Click **Firmware**.
7. Click **upgrading a file or specifying a URL**.
8. On the Upgrade Firmware page, select one of the following options:
  - To upload firmware from a file, click **Choose File**, navigate to the `.tar` file you want to upload, and click **Open**.
  - To upload firmware from an HTTP(s) staging server on your network, click **retrieve from URL instead** and then type the URL in the Firmware URL field.
9. Click **Upgrade**.  
The ExtraHop system initiates the firmware upgrade. You can monitor the progress of the upgrade with the Updating progress bar. The appliance restarts after the firmware is installed.
10. Repeat steps 6-9 on all remaining recordstore cluster nodes.

### Next steps

After all nodes in the recordstore cluster are upgraded, re-enable record ingest and shard reallocation on the cluster. You only need to perform these steps on one recordstore node.

1. In the Recordstore Cluster Settings section, click **Cluster Data Management**.
2. Click **Enable Record Ingest**.
3. Click **Enable Shard Reallocation**.

## Upgrade the firmware on packetstores

1. Download the firmware for the appliance from the [ExtraHop Customer Portal](#) to your computer.
2. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
3. Click **uploading a file or specifying a URL**.
4. On the Upgrade Firmware page, select one of the following options:
  - To upload firmware from a file, click **Choose File**, navigate to the .tar file you want to upload, and click **Open**.
  - To upload firmware from an HTTP(s) staging server on your network, click **retrieve from URL instead** and then type the URL in the Firmware URL field.
5. (Optional) If you do not want to automatically restart the appliance after the firmware is installed, clear the **Automatically restart appliance after installation** checkbox.
6. Click **Upgrade**.  
The ExtraHop system initiates the firmware upgrade. You can monitor the progress of the upgrade with the Updating progress bar. The appliance restarts after the firmware is installed.
7. If you did not choose to automatically restart the appliance, click **Reboot** to restart the system.  
After the firmware update is installed successfully, the ExtraHop appliance displays the version number of the new firmware on the Administration settings.


## Upgrade connected sensors in RevealX 360

Administrators can upgrade sensors that are connected to RevealX 360.


### Before you begin

- Your user account must have privileges on RevealX 360 for System and Access Administration or System Administration.

Here are some considerations about upgrading sensors:

- Sensors must be connected to ExtraHop Cloud Services
  - Notifications appear when a new firmware version is available
  - You can upgrade multiple sensors at the same time
1. From the Overview page, click **System Settings**  and then click **Sensors**.

Sensors that are eligible for upgrade display an up arrow in the Sensor Version field.

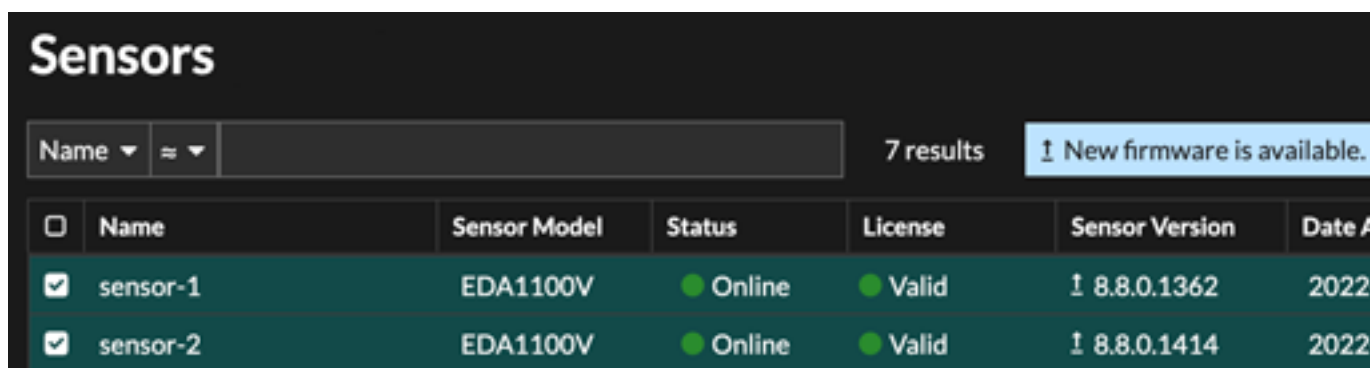

<input type="checkbox"/>	Name	Sensor Model	Status	License	Sensor Version	Date A
<input checked="" type="checkbox"/>	sensor-1	EDA1100V	Online	Valid	↑ 8.8.0.1362	2022
<input checked="" type="checkbox"/>	sensor-2	EDA1100V	Online	Valid	↑ 8.8.0.1414	2022

2. Select the checkbox next to each sensor that you want to upgrade.
3. In the Sensor Details pane, select the firmware version from the **Available Firmware** drop-down list. The drop-down list only displays versions that are compatible with the selected sensors.  
Only the selected sensors that have a firmware upgrade available appear in the Sensor Details pane.
4. Click **Install Firmware**.  
When the upgrade completes, the Sensor Version field is updated with the new firmware version.

## System Time

The System Time page displays the current time settings configured for your ExtraHop system. View the current system time settings, the default display time for users, and details for configured NTP servers.

System time is the time and date tracked by services running on the ExtraHop system to ensure accurate time calculations. By default, the system time on the sensor or console is configured locally. For better accuracy, we recommend that you configure the system time through an NTP time server.

When capturing data, the system time must match the time on connected sensors to ensure that time stamps are correct and complete in scheduled reports, exported dashboards and chart metrics. If time sync issues occur, check that the configured system time, external time servers, or NTP servers are accurate. [Reset the system time](#) or [sync NTP servers](#) if needed

The table below contains details about the current system time configuration. Click **Configure Time** to [configure system time settings](#).

Detail	Description
Time Zone	Displays the currently selected time zone.
System Time	Displays the current system time.
Time Servers	Displays a comma-separated list of configured time servers.

### Default display time for users

The Default Display Time for Users section shows the time displayed to all users in the ExtraHop system unless a user manually [changes their displayed time zone](#).

To modify the default display time, select one of the following options and then click **Save Changes**:

- Browser time
- System time
- UTC

### NTP Status

The NTP Status table displays the current configuration and status of all NTP servers that keep the system clock in sync. The table below contains details about each configured NTP server. Click **Sync Now** to sync the current system time to a remote server.

remote	The host name or IP address of the remote NTP server you have configured to synchronize with.
st	The stratum level, 0 through 16.
t	The type of connection. This value can be <code>u</code> for unicast or <code>m</code> for multicast, <code>b</code> for broadcast or <code>l</code> for local reference clock, <code>s</code> for symmetric peer, <code>A</code> for a multicast server, <code>B</code> for a broadcast server, or <code>M</code> for a multicast server.
when	The last time when the server was queried for the time. The default value is seconds, or <code>m</code> is displayed for minutes, <code>h</code> for hours, and <code>d</code> for days.
poll	How often the server is queried for the time, with a minimum of 16 seconds to a maximum of 36 hours.
reach	Value that shows the success and failure rate of communicating with the remote server. Success means the bit is set, failure means the bit is not set. 377 is the highest value.

delay	The round trip time (RTT) of the ExtraHop appliance communicating with the remote server, in milliseconds.
offset	Indicates how far off the ExtraHop appliance clock is from the time reported by the server. The value can be positive or negative, displayed in milliseconds.
jitter	Indicates the difference, in milliseconds, between two samples.

## Configure the system time

By default, the ExtraHop system synchronizes the system time through the \*.extrahop.pool.ntp.org network time protocol (NTP) servers. If your network environment prevents the ExtraHop system from communicating with these time servers, you must configure an alternate time server source.

### Before you begin

 **Important:** Always configure more than one NTP server to increase the accuracy and reliability of time kept on the system.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Appliance Settings section, click **System Time**.
3. Click **Configure Time**.
4. From the **Select time zone** drop-down list, select your time zone.
5. Click **Save and Continue**.
6. On the Time Setup page, select one of the following options:

- Set time manually



**Note:** You cannot manually set the time for sensors that are managed by a console or RevealX 360.

- Set time with NTP server

7. Select **Set time with NTP server** and then click **Select**.

The ExtraHop time servers, `0.extrahop.pool.ntp.org`, `1.extrahop.pool.ntp.org`, `2.extrahop.pool.ntp.org`, and `3.extrahop.pool.ntp.org` appear in the first four Time Server fields by default.

8. In the Time Server fields, type the IP address or fully qualified domain name (FQDN) for the time servers.

You can specify up to nine time servers.



**Tip:** After adding the fifth time server, click **Add Server** to display up to four additional timer server fields.

9. Click **Done**.

The NTP Status table displays a list of NTP servers that keep the system clock in sync. To sync the current system time a remote server, click the **Sync Now** button.

## Shutdown or restart

The Explore Admin UI provides an interface to halt, shutdown, and restart the Explore appliance components.

### System

Restart or shut down the Explore appliance.

### Admin

Restart the Explore appliance administrator component.



### Receiver

Restart the Explore receiver component.

### Search

Restart the Explore search service.

For each Explore appliance component, the table includes a time stamp to show the start time.

## Restart an Explore appliance component

1. On the Admin page in the Appliance Settings section, click **Shutdown or Restart**.
2. Select **Restart** for the component you want to restart:
  - System (can also be shutdown completely)
  - Admin
  - Receiver
  - Search

## License

The Administration settings provide an interface to add and update licenses for add-in modules and other features available in the ExtraHop system. The License Administration page includes the following licensing information and settings:

### Manage license

Provides an interface to add and update the ExtraHop system

### System Information

Displays the identification and expiration information about the ExtraHop system.

### Features

Displays the list of licensed features and whether the licensed features are enabled or disabled.

## Register your ExtraHop system

This guide provides instructions on how to apply a new product key and activate all of your purchased modules. You must have privileges on the ExtraHop system to access the Administration settings.

### Register the appliance


#### Before you begin



**Note:** If you are registering a sensor or a console, you can optionally enter the product key after you accept the EULA and log in to the ExtraHop system (`https://<extrahop_ip_address>/`).

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. Review the license agreement, select I Agree, and then click **Submit**.
3. On the login screen, type `setup` for the username.
4. For the password, select from the following options:
  - For 1U and 2U appliances, type the serial number printed on the label on the back of the appliance. The serial number can also be found on the LCD display on the front of the appliance in the `Info` section.
  - For the EDA 1100, type the serial number displayed in the `Appliance info` section of the LCD menu. The serial number is also printed on the bottom of the appliance.
  - For the EDA 1200, type the serial number printed on the back of the appliance.

- For a virtual appliance in AWS, type the instance ID, which is the string of characters that follow i- (but not i- itself).
  - For a virtual appliance in GCP, type the instance ID.
  - For all other virtual appliances, type `default`.
5. Click **Log In**.
  6. In the Appliance Settings section, click **License**.
  7. Click **Manage License**.
  8. If you have a product key, click **Register** and type your product key into the field.
 



**Note:** If you received a license file from ExtraHop Support, click **Manage License**, click **Update**, then paste the contents of the file into the Enter License field. Click **Update**.
  9. Click **Register**.

#### Next steps

Have more questions about ExtraHop licensing works? See the [License FAQ](#).

#### Troubleshoot license server connectivity

For ExtraHop systems licensed and configured to connect to ExtraHop Cloud Services, registration and verification is performed through an HTTPS request to ExtraHop Cloud Services.

If your ExtraHop system is not licensed for ExtraHop Cloud Services or is not yet licensed, the system attempts to register the system through a DNS TXT request for `regions.hopcloud.extrahop.com` and an HTTPS request to all [ExtraHop Cloud Services regions](#). If this request fails, the system tries to connect to the ExtraHop licensing server through DNS server port 53. The following procedure is useful to verify that the ExtraHop system can communicate with the licensing server through DNS.

Open a terminal application on your Windows, Linux, or macOS client that is on the same network as your ExtraHop system and run the following command:

```
nslookup -type=NS d.extrahop.com
```

If the name resolution is successful, output similar to the following appears:

```
Non-authoritative answer:
d.extrahop.com  nameserver = ns0.use.d.extrahop.com.
d.extrahop.com  nameserver = ns0.usw.d.extrahop.com.
```

If the name resolution is not successful, make sure that your DNS server is properly configured to lookup the `extrahop.com` domain.

#### Apply an updated license

When you purchase a new protocol module, service, or feature, the updated license is automatically available on the ExtraHop system. However you must apply the updated license to the system through the Administration settings for the new changes to take effect.

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Appliance Settings section, click **License**.  
A message appears about the availability of your new license.

[Admin](#) › [License](#)

## License Administration

New license is available. [Apply new license.](#)

[Manage license](#) ▼

3. Click **Apply new license.**

The capture process restarts, which might take a few minutes.



**Note:** If your license is not automatically updated, [troubleshoot licensing server connectivity](#) or contact ExtraHop Support.

### Update a license

If ExtraHop Support provides you with a license file, you can install this file on your appliance to update the license.



**Note:** If you want to update the product key for your appliance, you must [register your ExtraHop system.](#)

1. Log in to the Administration settings on the ExtraHop system through `https://<extrahop-hostname-or-IP-address>/admin`.
2. In the Appliance Settings section, click **License**.
3. Click **Manage License**.
4. Click **Update**.
5. In the Enter License text box, enter the licensing information for the module.

Paste the license text provided to you by ExtraHop Support. Be sure to include all of the text, including the `BEGIN` and `END` lines, as shown in the example below:

```
-----BEGIN EXTRAHOP LICENSE-----
serial=ABC123D;
dossier=1234567890abcdef1234567890abcdef;
mod_cifs=1;
mod_nfs=1;
mod_amf=0;
live_capture=1;
capture_upload=1;
...
ssl_decryption=0;
+++;
ABCabcDE/FGHIjklm12nopqrstuvwxyzXYZAB12345678abcde901abCD;
12ABCDEFGH1HIJklmnOP+1aA=;
=abcd;
-----END EXTRAHOP LICENSE-----
```

6. Click **Update**.

### Disks

The Disks page provides information about the configuration and status of the disks in your Explore appliance. The information displayed on this page varies based on whether you have a physical or virtual appliance.



**Note:** We recommend that you configure the settings to receive **email notifications** about your system health. If a disk is beginning to experience problems, you will be alerted. For more information, see the Notifications section.

The following information displays on the page:

**Drive Map**

(Physical only) Provides a visual representation of the front of the Explore appliance.

**RAID Disk Details**

Provides access to detailed information about all the disks in the node.

**Firmware**

Displays information about disks reserved for the Explore appliance firmware.

**Utility (Var)**

Displays information about disks reserved for system files.

**Search**

Displays information about disks reserved for data storage.

**Direct Connected Disks**

Displays information about virtual disks on virtual machine deployments, or USB media in physical appliances.

## Explore Cluster Settings

The Explore Cluster Settings section provides the following configurable settings:

### Join Cluster

Join an ExtraHop recordstore to an existing cluster. This setting appears only for single nodes that have not yet been joined to a cluster.

### Cluster Members

Displays all of the nodes that are members of the cluster.

### Cluster Data Management

Displays settings to configure the data replication level, enable or disable shard reallocation, and enable or disable record ingest. These settings are applied to all nodes in the cluster.

### Manager

Displays the hostname of the console that is configured to manage the ExtraHop recordstore as well as a list of all sensors and consoles connected to the recordstore.

### Manage with Command Appliance

Configure settings to enable a console to remotely run support scripts on the ExtraHop recordstore.


### Restore Cluster State

Restore the cluster to a healthy state. This setting only appears if the cluster displays a status of `red` on the Cluster Status page.

## Create a recordstore cluster

For the best performance, data redundancy, and stability, you must configure at least three ExtraHop recordstores in a cluster.


When you create a recordstore cluster, be sure to deploy all nodes, including manager nodes, in the same location or data center. For more information on supported recordstore cluster configurations, see [Recordstore cluster guidelines](#).

 **Important:** If you are creating a recordstore cluster with six to nine nodes, you must configure the cluster with at least three manager-only nodes. For more information, see [Deploying manager-only nodes](#).

In the following example, the recordstores have the following IP addresses:

- Node 1: 10.20.227.177
- Node 2: 10.20.227.178
- Node 3: 10.20.227.179


You will join nodes 2 and 3 to node 1 to create the recordstore cluster. All three nodes are data nodes. You cannot join a data node to a manager node or join a manager node to a data node to create a cluster.


 **Important:** Each node that you join must have the same configuration (physical or virtual) and the same ExtraHop firmware version.

### Before you begin


You must have already installed or provisioned the recordstores in your environment before proceeding.

1. Log in to the Administration settings on all three recordstores with the `setup` user account in three separate browser windows or tabs.
2. Select the browser window of node 1.
3. In the Status and Diagnostics section, click **Fingerprint** and note the fingerprint value.  
You will later confirm that the fingerprint for node 1 matches when you join the remaining two nodes.

4. Select the browser window of node 2.
5. In the Explore Cluster Settings section, click **Join Cluster**.
6. In the **Host** field, type the hostname or IP address of data node 1 and then click **Continue**.
  -  **Note:** For cloud-based deployments, be sure to type the IP address listed in the Interfaces table on the Connectivity page.
7. Confirm that the fingerprint on this page matches the fingerprint you noted in step 3.

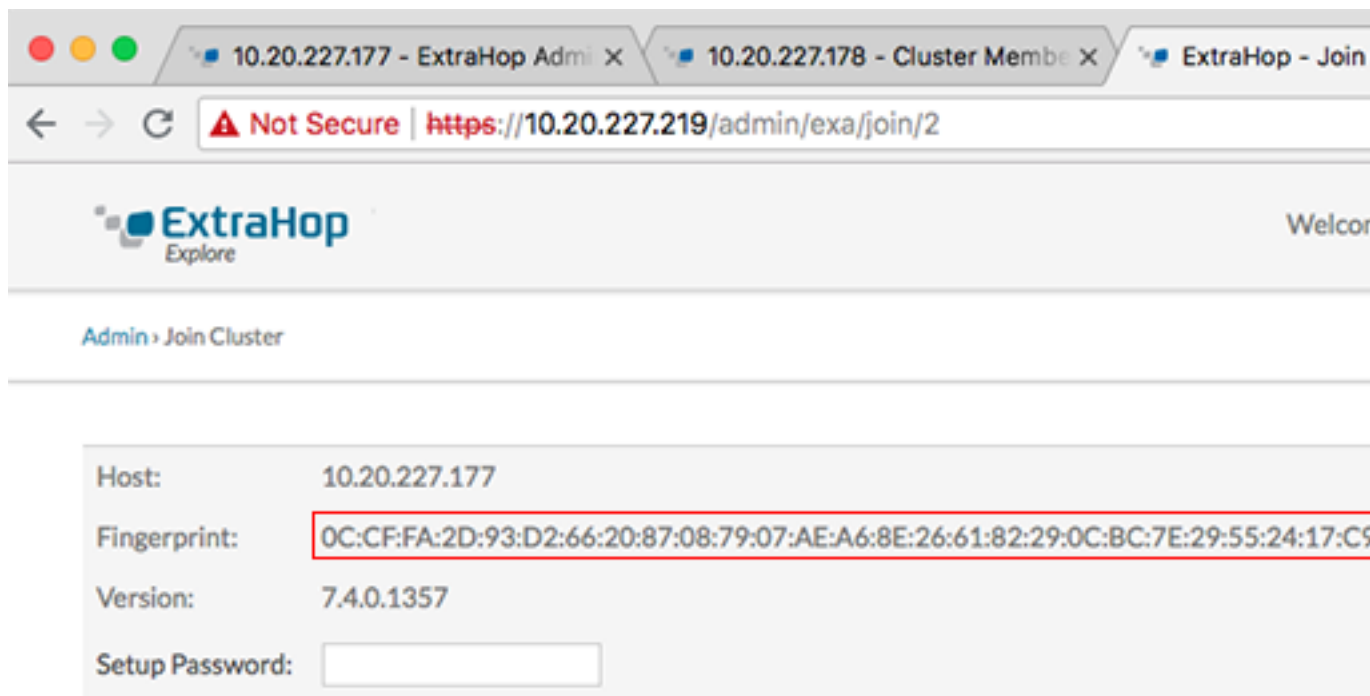

8. In the **Setup Password** field, type the password for the node 1 `setup` user account and then click **Join**. When the join is complete, the Explore Cluster Settings section has two new entries: **Cluster Members** and **Cluster Data Management**.
9. Click **Cluster Members**.  
You should see node 1 and node 2 in the list.

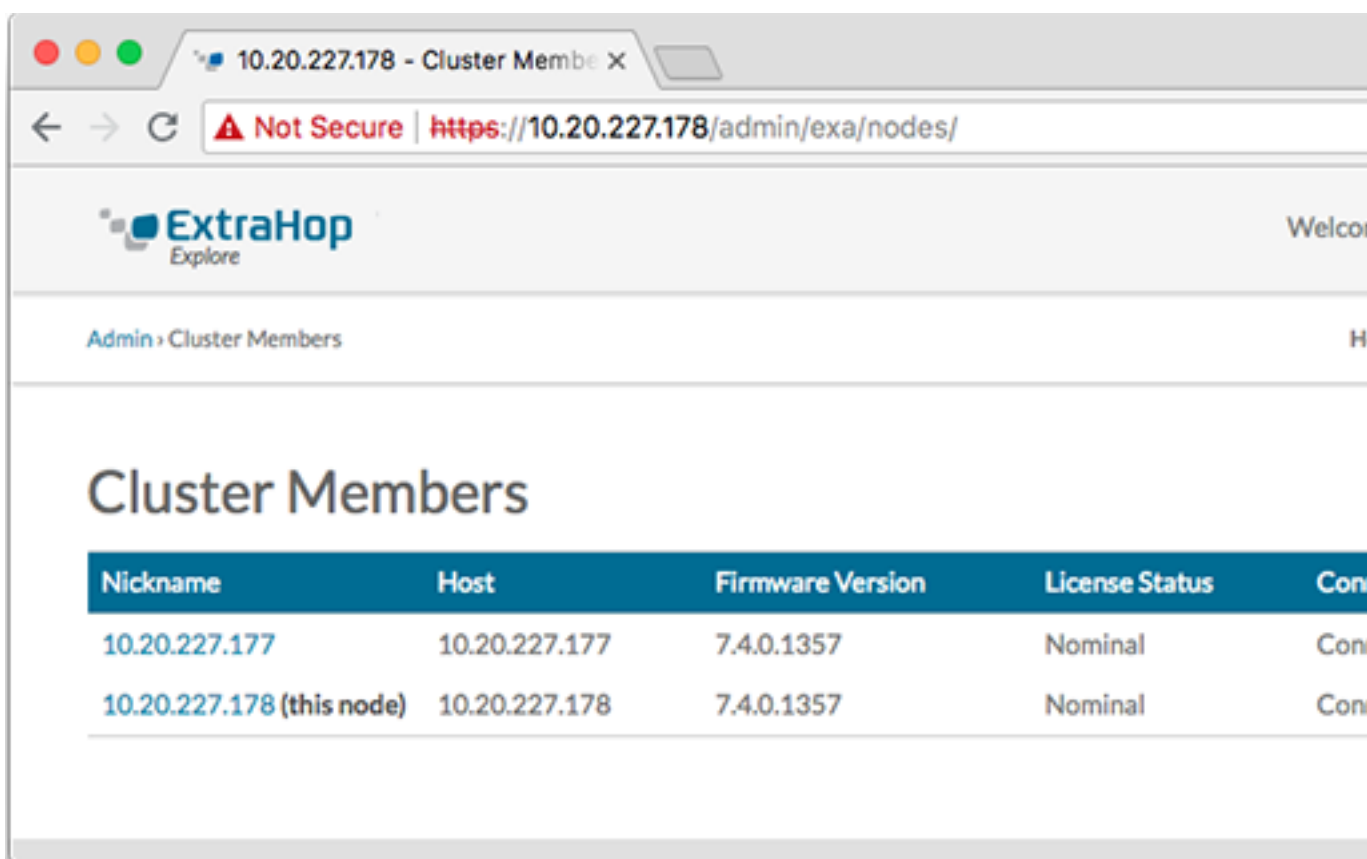

10. In the Status and Diagnostics section, click **Explore Cluster Status**.

Wait for the Status field to change to Green before adding the next node.


11. Repeat steps 5 through 10 to join each additional node to the new cluster.



**Note:** To avoid creating multiple clusters, always join a new node to an existing cluster and not to another single appliance.

12. When you have added all of your recordstores to the cluster, click **Cluster Members** in the Explore Cluster Settings section.

You should see all of the joined nodes in the list, similar to the following figure.

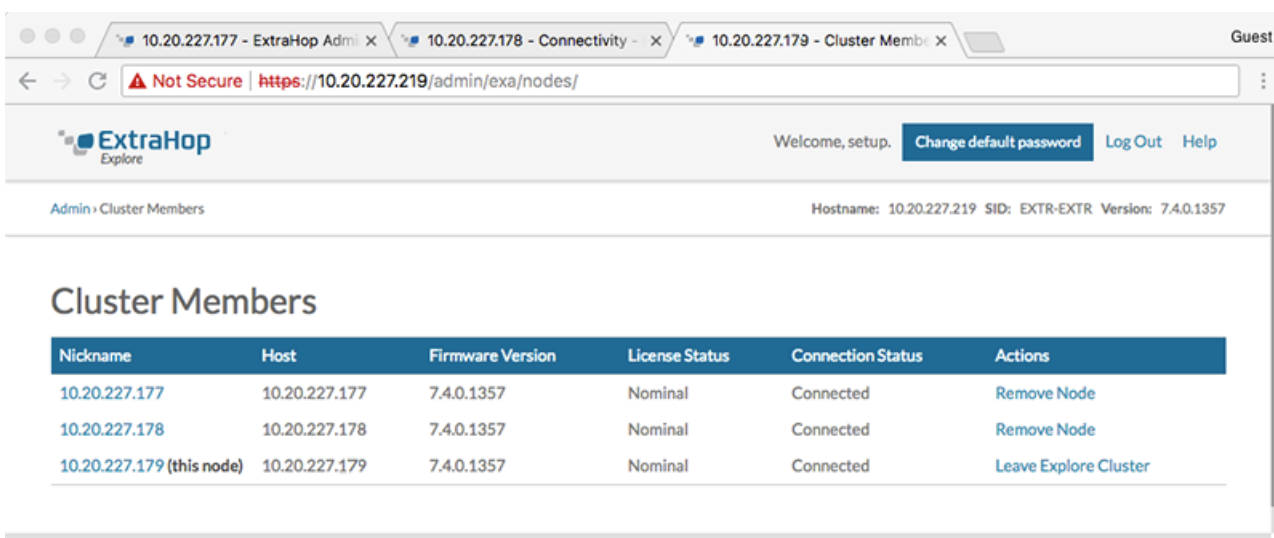

13. In the Explore Cluster Settings section, click **Cluster Data Management** and make sure that **Replication Level** is set to **1** and **Shard Reallocation** is **ON**.

**Next steps**

Connect the EXA 5200 to the ExtraHop system [🔗](#).

**Recordstore cluster guidelines**

The following table shows recommended guidelines for recordstore cluster configuration.

Number of Data Nodes	Supported Cluster Composition
1 or 2	Not supported
3	3 Mixed (Traditional Data + Manager) Nodes
4	4 Mixed (Traditional Data + Manager) Nodes
5	5 Mixed (Traditional Data + Manager) Nodes
6	6 Dedicated Data Nodes + 3 Dedicated Manager Nodes
7	7 Dedicated Data Nodes + 3 Dedicated Manager Nodes
8	8 Dedicated Data Nodes + 3 Dedicated Manager Nodes
9	9 Dedicated Data Nodes + 3 Dedicated Manager Nodes
10 or more	Not supported

**Cluster Members**

If you have multiple nodes connected to an Explore cluster, you can view information about each node.

The table on this page provides the following information about each node in the cluster.

**Nickname**

Displays the IP address or nickname of the Explore appliance.

To assign a nickname, or change the existing nickname of a cluster member, click the IP address or nickname in the Nickname column, type a name in the Name field, and then click **Rename Node**.

**Host**

Displays the IP address of the Explore appliance.

**Firmware Version**

Displays the firmware version of the Explore appliance. Every node in the cluster must have the same firmware version to prevent unexpected behavior when replicating data across all nodes.

**License Status**

Displays the current status of the ExtraHop license. The License Status field displays one of the following states:

**Nominal**

The Explore appliance has a valid license.

**Invalid**

The Explore appliance has an invalid license. New records cannot be written to this node and existing records cannot be queried.

**Pre-Expired**

The Explore appliance has a license that is expiring soon.

**Pre-Disconnected**

The Explore appliance cannot connect to the ExtraHop license server.



**Disconnected**

The Explore appliance has not connected to the ExtraHop license server for more than 7 days. New records cannot be written to this node and existing records cannot be queried.

**Connection Status**

Displays whether the appliance is connected to the other members in the cluster. The possible connection states are `Connected` and `Unreachable`.

**Actions**

Remove an Explore node from the cluster.

## Remove a node from the cluster

1. In the Explore Cluster Settings section, click **Cluster Members**.
2. In the Actions column, choose one of the following options:
  - Click **Leave Explore Cluster** if you want to remove the node that you are currently logged in to, and then click **OK** to confirm.
  - Click **Remove Node** next to the node you want to remove and then click **Remove Node** to confirm.

## Manager and Connected Appliances

The Manager and Connected Appliances section includes the following information and controls.

**Manager**

Displays the hostname of the console that is configured to manage the ExtraHop recordstore. To connect to a Command appliance through a tunneled connection, click **Connect to a Command Appliance**. A tunneled connection might be required if a direct connection cannot be established through the Command appliance.

Click **Remove Manager** to remove the Command appliance as the manager.



**Note:** The Explore appliance can be managed by only one Command appliance.

**Clients**

Displays a table of all Discover appliances and Command appliances connected to the Explore appliance. The table includes the hostname of the connected client and the client product key. Click **Remove Client** in the Actions column to remove a connected client.

## Cluster Data Management

The Cluster Data Management page enables you to adjust settings for how records are collected and stored on your Explore cluster. You must connect an ExtraHop sensor to the recordstore cluster before you can configure replication level and shard reallocation settings.

You can manage how record data is stored on your recordstore cluster.

- Change the replication level to determine how many copies of each record are stored. A higher number of copies improves fault tolerance if a node fails and also improves the speed of query results. However, a higher number of copies takes up more disk space and might slow the indexing of the data.

Option	Description
0	Data is not replicated to other nodes in the cluster. This level allows you to collect more data on the cluster; however, if there is a node failure, you will permanently lose data.

Option	Description
1	There is one copy of the original data stored on the cluster. If one node fails, you will not permanently lose data.
2	There are two copies of the original data stored on the cluster. This level requires the most disk space but provides the highest level of data protection. Two nodes in the cluster can fail without permanently losing data.

- Enable or disable shard reallocation. Shard reallocation is enabled by default. Prior to taking the node offline for maintenance (for example, upgrading firmware, replacing disks, power cycling the appliance, or removing network connectivity between recordstore nodes), you should disable shard reallocation. After node maintenance is complete, enable shard reallocation.
- Enable or disable record ingest. Record ingest is enabled by default and controls whether records can be written to your recordstore cluster. You must disable record ingest prior to upgrading firmware.

## Connect to a Command appliance

Connect to a Command appliance to remotely run support scripts and upgrade firmware on the Explore appliance.


This procedure connects the Explore appliance to the Command appliance through a tunneled connection. Tunneled connections are required in network environments where a direct connection from the Command appliance is not possible because of firewalls or other network restrictions. When possible, you should always connect appliances directly from the Command appliance.

1. In the Explore Cluster Settings section, click **Connect to a Command Appliance**.
2. Configure the following settings:
  - Command appliance hostname: The hostname or IP address of the Command appliance.
  - Command appliance setup password: The `setup` user password for the Command appliance.
  - Explore node nickname (Optional): A friendly name for the Explore node. If no nickname is entered, the node is identified by the hostname.
3. Select the Manage with Command appliance checkbox and then click **Connect**.

## Restore the cluster state

In rare instances, the Explore cluster might not recover from a `Red` status, as seen in the Status section on the Explore Cluster Status page. When this state occurs, it is possible to restore the cluster to a `Green` state.

When you restore the cluster state, the Explore cluster is updated with the latest stored information about the Explore nodes in the cluster and all other connected Discover and Command appliances.

 **Important:** If you have recently restarted your Explore cluster, it might take an hour before the cluster status `Green` appears, and restoring the cluster might not be necessary. If you are unsure whether you should restore the cluster state, contact [ExtraHop Support](#).

1. In the Explore Cluster Settings section, click **Restore Cluster State**.
2. On the Restore Cluster State page, click **Restore Cluster State**.
3. Click **Restore Cluster** to confirm.